


CANVAS^{TM/MC}

KINGSMERE 10' X 10' SINGLE-TIER SKYLIGHT GAZEBO

MODEL NO. 088-1873-8

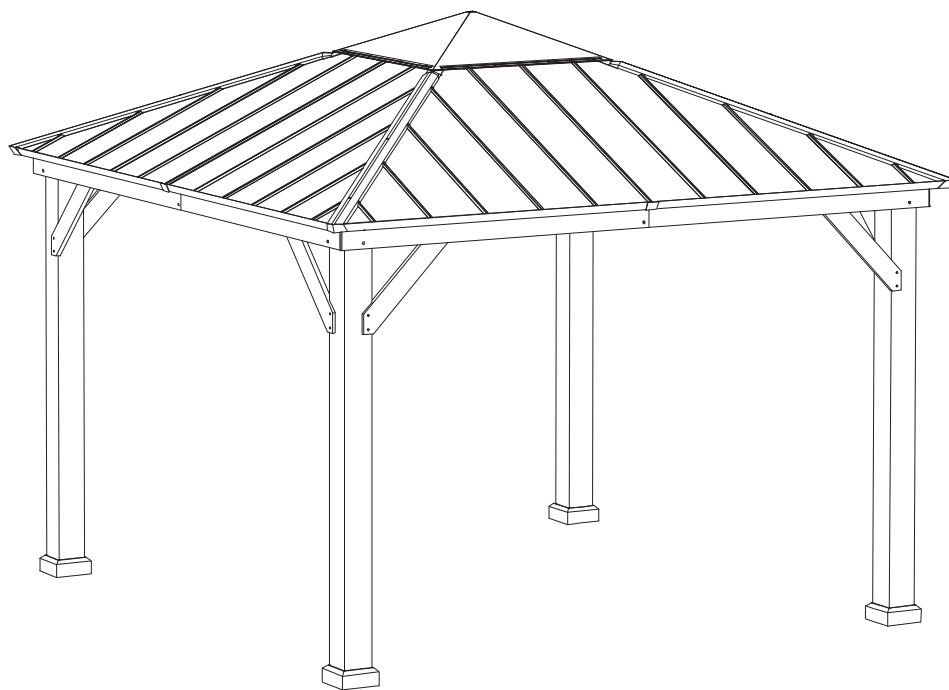

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Production Number : xxxxxxxx

CANVAS™

INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.


That's why **CANVAS™** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS™** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**


We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#mycanvasstyle.**

Show us how you bring **CANVAS™** products to life. We can't wait to see!

DIMENSIONS

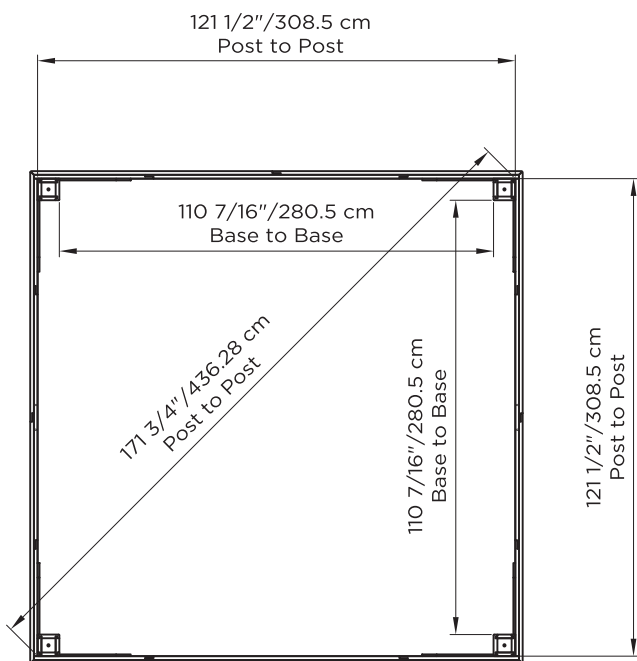

FRAME

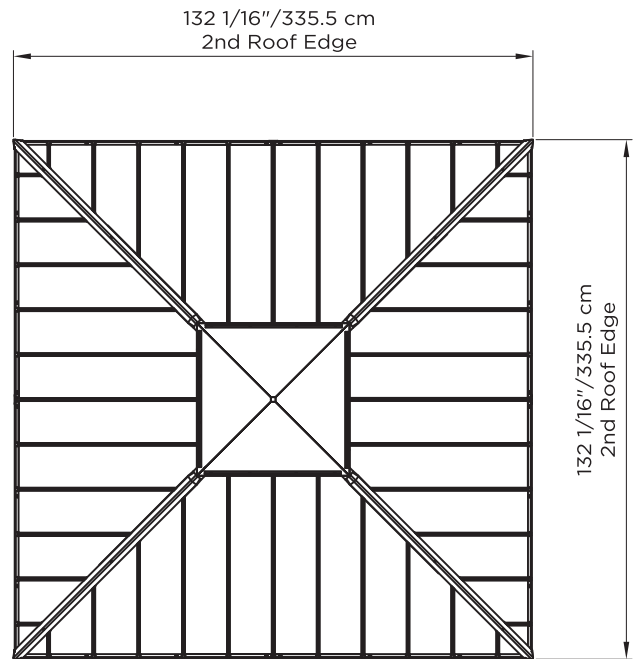

ROOF

Concrete Footer

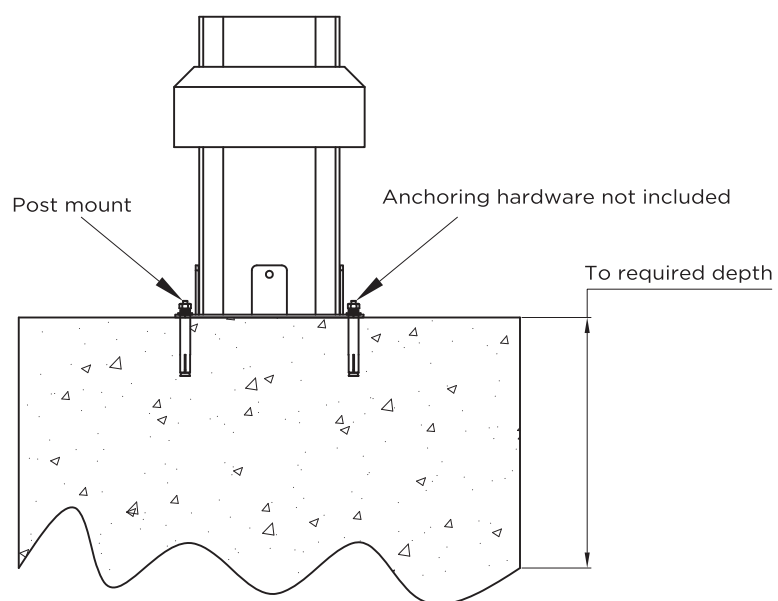


TABLE OF CONTENTS

Parts List	6
Before You Begin Assembly	13
Step-by-step Guide	14
Technical Data	37
Troubleshooting	38
Caring for Your Item	39
Warranty	40



WARNING! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.
CAUTION! Always keep children and pets under close supervision while they are using or around this product. Never leave children unattended.



Let us help you!
DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!
 1-888-670-6684 (toll free).

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.


IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact us at 1-888-670-6684 (toll free).

When assembling wooden parts, do not over-torque the bolts to avoid splitting the wood. See image illustration.

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our Customer Service team at 1-888-670-6684 (toll free).


TOOLS REQUIRED

Needed for assembly: Below tools are not included in the package.

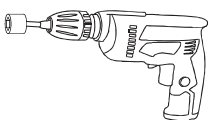

NOTE: Do not over-drill/
Be aware of over-drilling.

 Cordless drill



Hammer



Screwdriver




Ladder



5 people




This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.

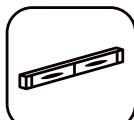


Use Level

Check that set or assembly is properly level before proceeding.

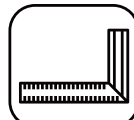

Square Assembly

Check that assembly is square before tightening bolts.

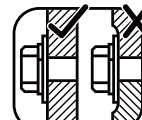

Tighten Bolts

Do not over-torque mounting bolts. Over-tightening may cause the wood to crack creating splinters and other structural damage.



Measure Distance

TABLE OF CONTENTS







 


 



 

CAUTION!

- Proper placement of your gazebo is essential. Do not place the product underneath electrical lines.
- Keep children away during assembly. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any parts are missing.
- Wood is NOT flame-resistant and will burn. Grills, fire pits and chimneys are a fire hazard if placed too close to wooden structures. Consult user's manual of the grill, fire pit or chimney for safe distances from any flammable materials.


 











IMPORTANT: Wood components are manufactured with cedar wood which is coated with a water-based stain. Knots and small checks (cracks) are naturally occurring and do not affect the strength of the product. It is advisable to annually maintain the wooden parts of the gazebo with a coat of water-based water repellent sealant or outdoor wax oil to protect & enhance the beauty of the wood.

- This product is intended for outdoor use only.
- The product should be assembled on a flat stable surface.
- Do not assemble the gazebo on unstable surfaces.
- Ensure the location and clearance of your gazebo is acceptable.
- The gazebo must be anchored with stakes into the ground for added safety. It is recommended that it should not be permanently attached to a concrete floor or platform.
- This gazebo is not to be regarded as part of a building/house structure. The gazebo is to be anchored onto the ground for added safety. Do not assemble the gazebo onto soil/earth ground. It is best to have the gazebo built onto a wooden deck or concrete ground for stability. If it is to be build onto a wooden deck/ground, do ensure that the wooden deck/ground has a strong foundation. It is advisable to use appropriate floor plugs (not provided) to anchor the gazebo onto the wooden/concrete ground.
- Some structures may require two or more people to install safely. Check for underground utilities before digging or driving stakes into the ground.
- During installation, follow all safety warnings provided with your tools, and use safety glasses.
- In case you set up more than one gazebo, keep a minimum distance of 10' (3 m) between the gazebos.
- Arrange the necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves and glasses if necessary.
- Keep children and pets away while setting up the gazebo.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- Repairing and replacing parts should be done by a qualified technician.
- The gazebo is intended for decorative and shade purposes only, and is not designed to withstand harsh weather, including high winds, rain and snow.
- If the product is not being used for long periods of time (e.g., winter), it should be stored in a clean, dry environment.
- Do not put a liquid-propane or wood-burning firepit or fireplace inside the product.
- Do not climb or place heavy objects onto the gazebo roof.
- Retain the original packaging to store and protect the gazebo during the winter months.
- Do not use or enter the gazebo if the following conditions exist:
 - Visible movement of supports, roofing panels or a sagging roof;
 - Unusual noise from the gazebo;
 - Deformed roof panels;
 - Damaged or missing bolts/fasteners.
- Please check your HOA and local government agencies prior to purchasing and assembling gazebos. These local organizations may require permits and may have specific requirements for installation.
- Maintain your instruction manual for future reference.
- Warranty: Please retain you receipt for proof of purchase.






PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
03 P000400508	Lateral Left Short Beam		4
04 P000400509	Lateral Right Short Beam		4
05 P000400510	Inner Long Beam		4
06 P000400512	Inner Short Beam (Short Side)		4
08 P000200227	Post		4
10 P005000200	Arc Support 1		4
11 P005000201	Arc Support 2		4
21 P000400960	Inner Short Beam (Long Side)		4
A P00610021605	Base Cover		4
B P00010025805	Post Base		4
C P00050024805	Lower Connector for Rafter Beam		4
D P00050025105	Lower Connector for Middle Beam		4
E P00060231701	Big Top Frame		4

  
PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
F P00060197107	Rafter		4
G P00060198306	Middle Beam		4
J P00570034505	Left Mosquito Netting Rod		4
K P00570034605	Right Mosquito Netting Rod		4
L P00070105601	PC Cover Board		1
M P00060198907	Big Roof Upper Top Beam		8
N P00060199907	Big Roof Lower Top Beam		8
P P00060201207	Big Roof Left Panel Flashing (Short Side)		4
Q P00060201605	Big Roof Right Panel Flashing (Short Side)		4
R P00070111201	Big Top Left Big Roof Panel		4
S P00070111301	Big Top Right Big Roof Panel		4
T P00070101406	Big Roof Small Panel (Left Middle)		4
U P00070101606	Big Roof Small Panel (Right Middle)		4

  
PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
V P00070101006	Big Roof Small Panel (Left)		4
W P00070101206	Big Roof Small Panel (Right)		4
X P00080039501	Big Roof Rafter Cap		4
Y P00220038401	Press Panel for Roof Panel		8
AF P00220034802	Press Panel for PC Cover Board		4

 
 

 
 
 
 
 
 
 

 

EXPLODED PARTS

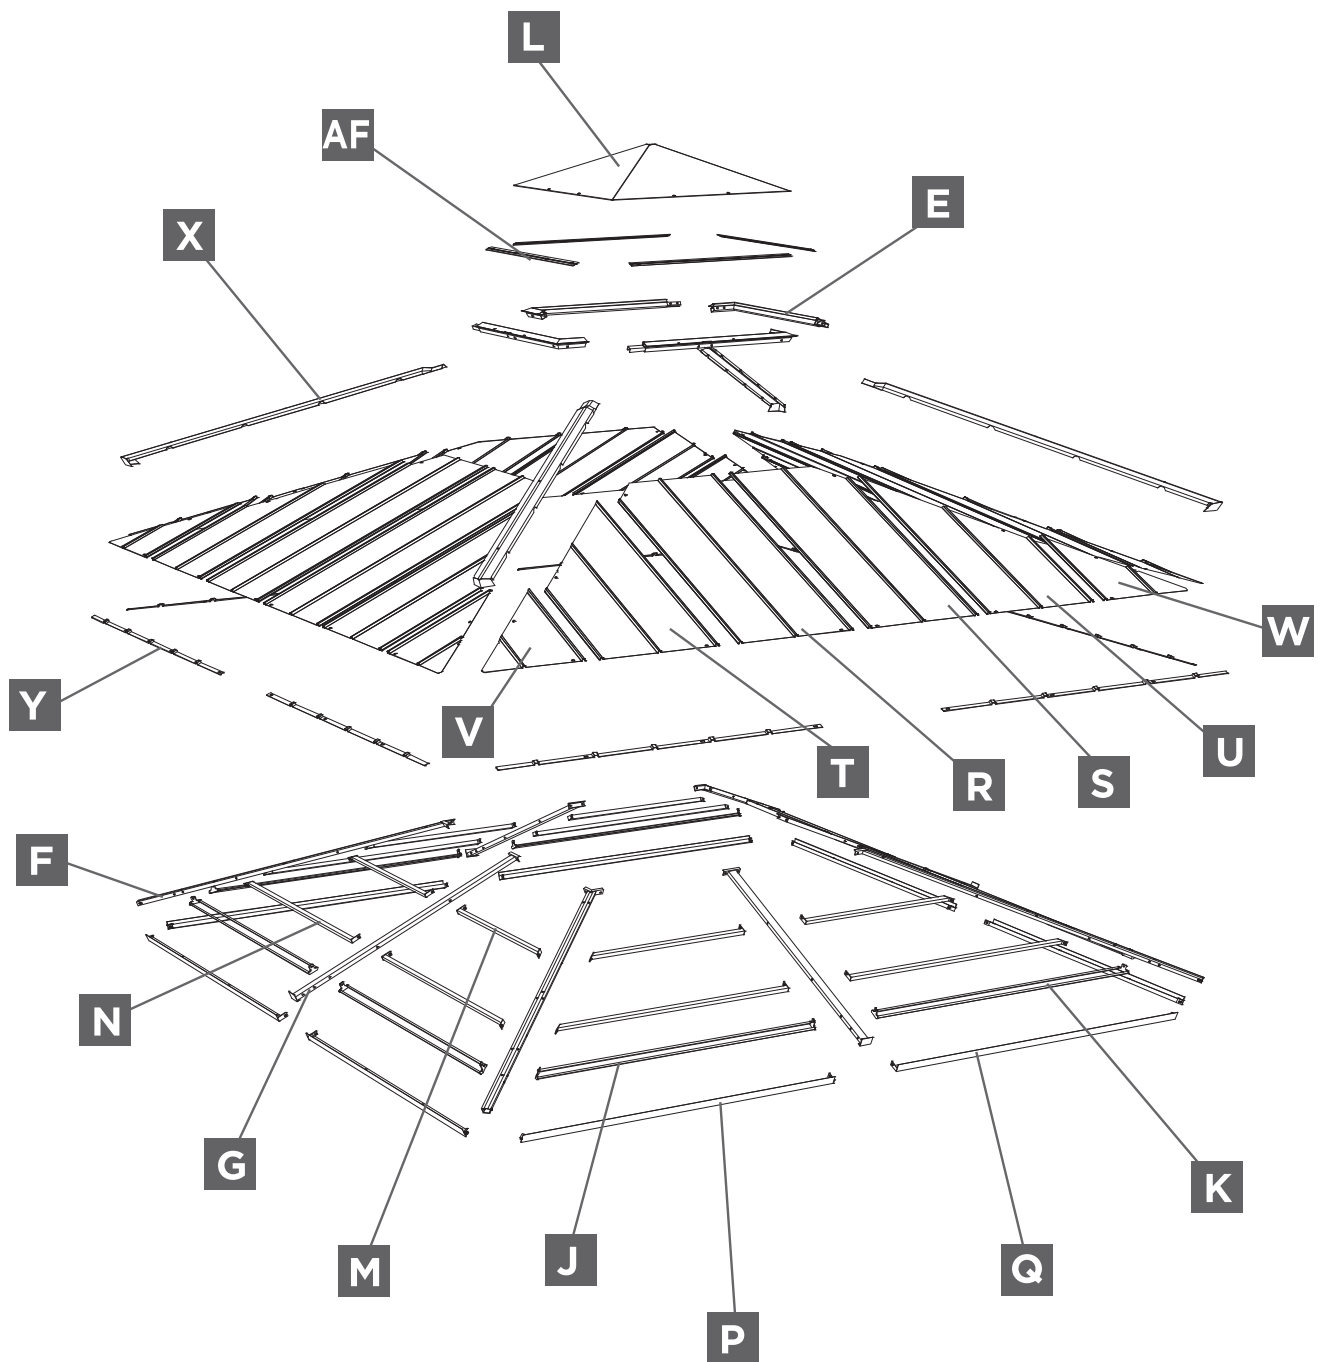

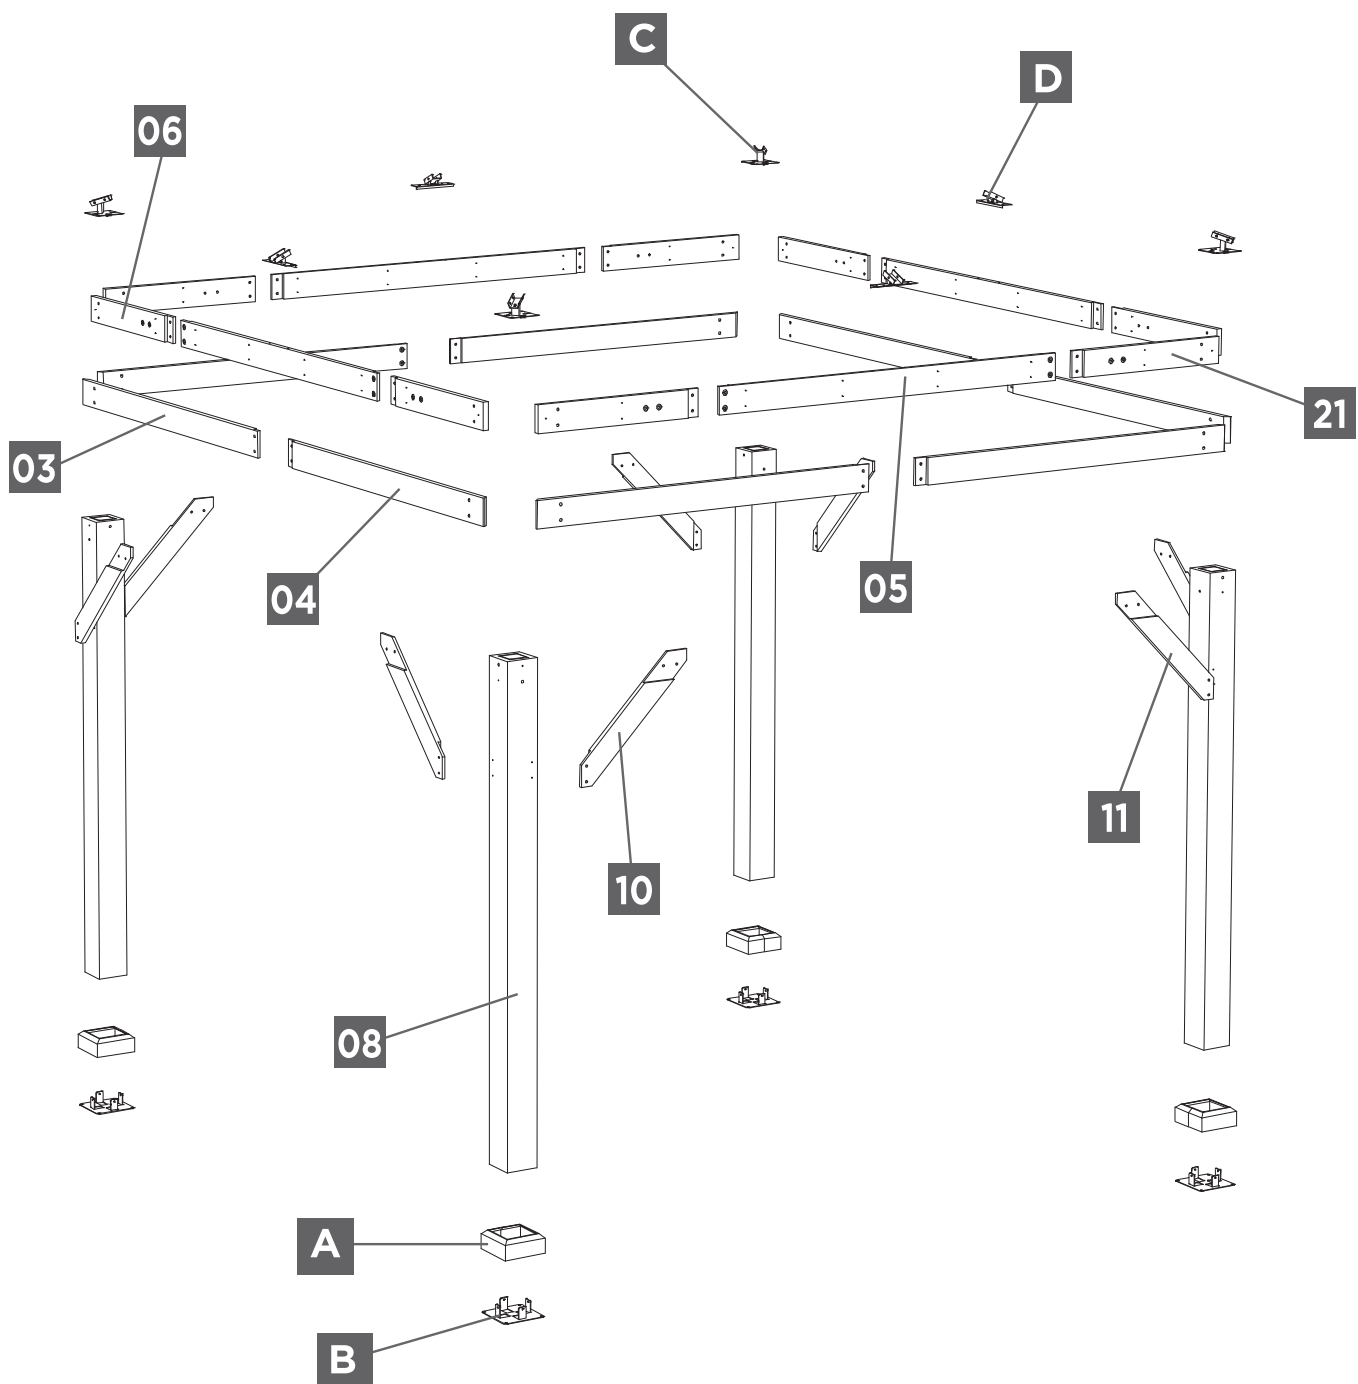

 
 
 
 

 
EXPLODED PARTS



HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
H1 H100010122	Bolt M6X20		144+8 Spare
H2 H100010123	Bolt M6X40		8+1 Spare
H3 H010010449	Bolt M10X205		8+1 Spare
H4 H100010054	Bolt M8X25		24+2 Spare
H5 H100010055	Bolt M8X35		16+1 Spare
H6 H030050058	Screw ST4.8X30		64+4 Spare
H7 H030050057	Screw ST4.8X40		56+3 Spare
H8 H030030013	Screw ST8X35		16+1 Spare
H9 H030010031	Screw ST9.5X80		8+1 Spare
H10 H050080007	Flat Washer M8		16+1 Spare
H11 H050080008	Flat Washer M10		24+2 Spare
H12 H040050026	Non-slip nuts M10		8+1 Spare
H13 H040090004	T-Nut M8X8		24+2 Spare


HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
H14 H040090005	T-Nut M8X20		16+1 Spare
H15 H090990002	M3 Bit		2
H16 H100010141	Bolt M6X15		16+1 Spare
H17 H050050018	Rubber Washer		8+1 Spare
HS H070010003	Stake Φ 8*180		8
HW1 H090010017	M6 Wrench		2
HW2 H090030005	Hex Key M8		1
HW3 H090010015	M10 Wrench		2

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

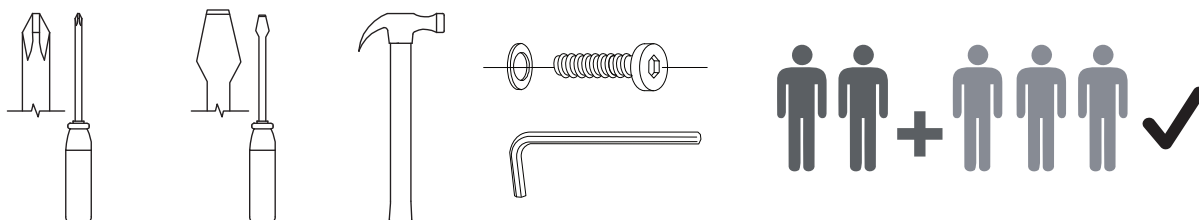


ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being assembled.

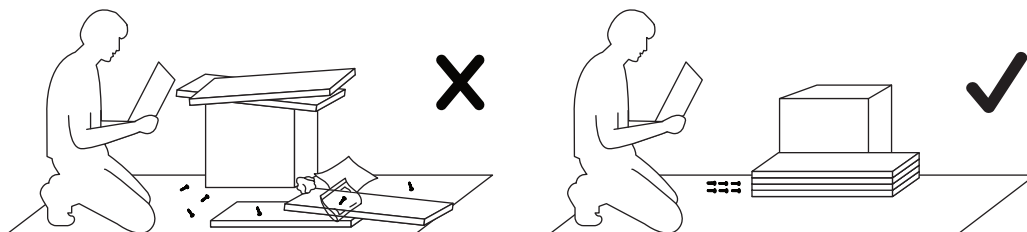


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

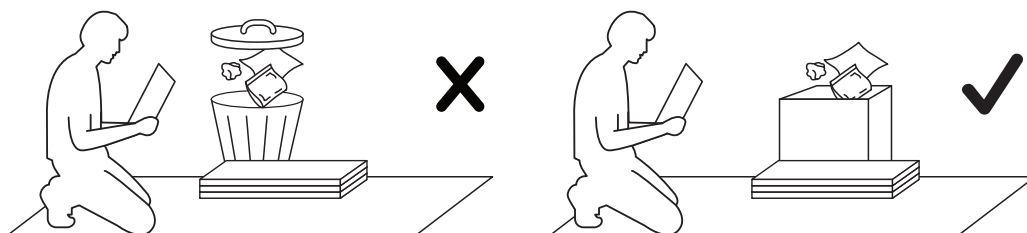

READ EACH STEP CAREFULLY

Make sure you understand each step. If you have questions, contact CANVAS™ customer service at 1-888-660-6684 (toll-free).

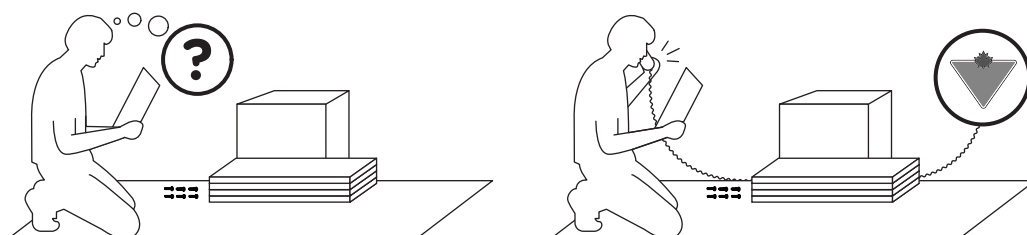

STEP-BY-STEP GUIDE

STEP 1


 
08 X4








C X4



H6 X32

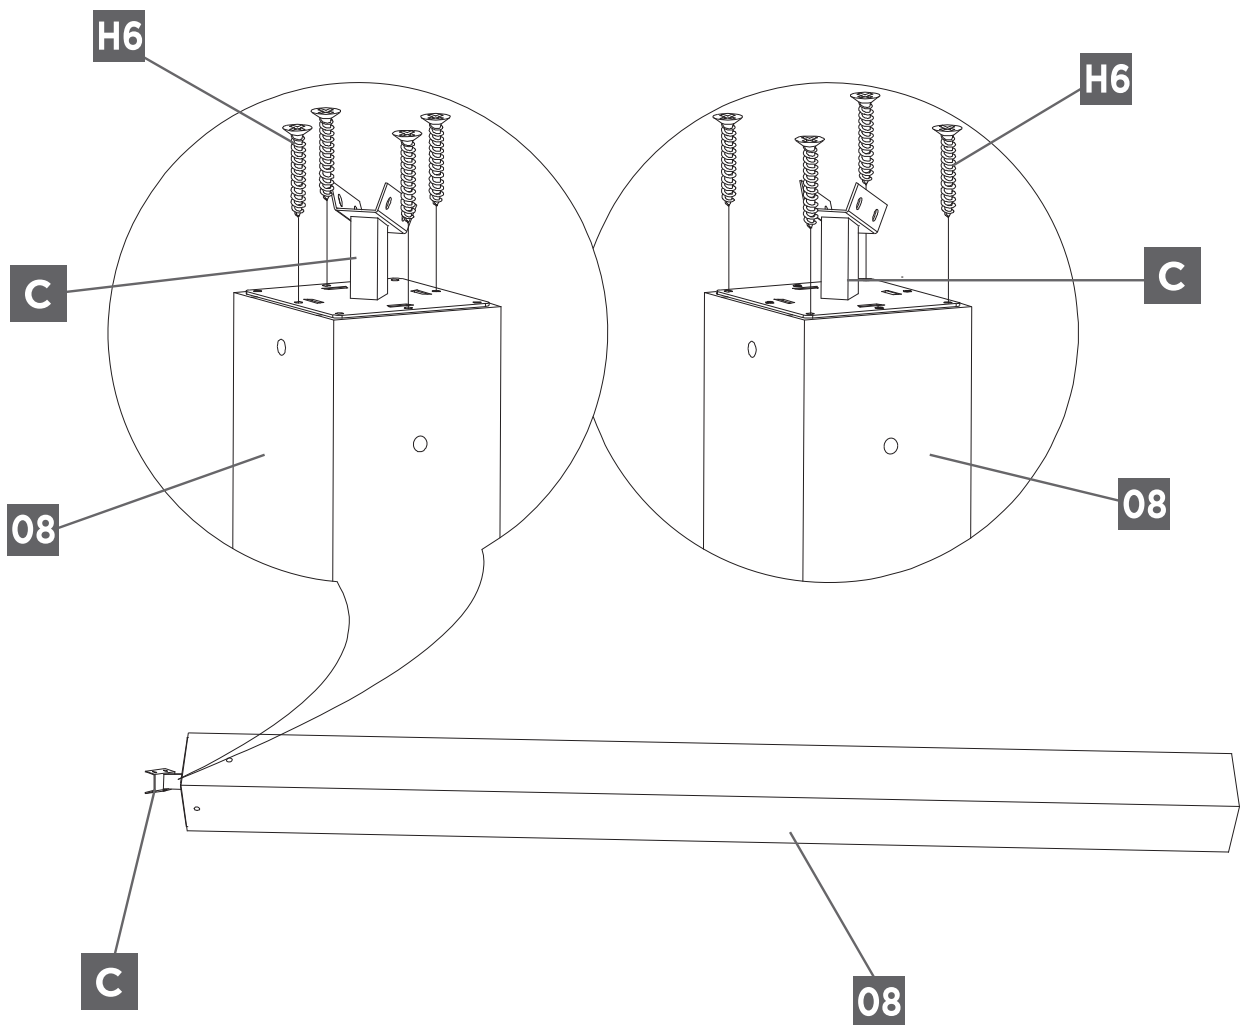


STEP 2

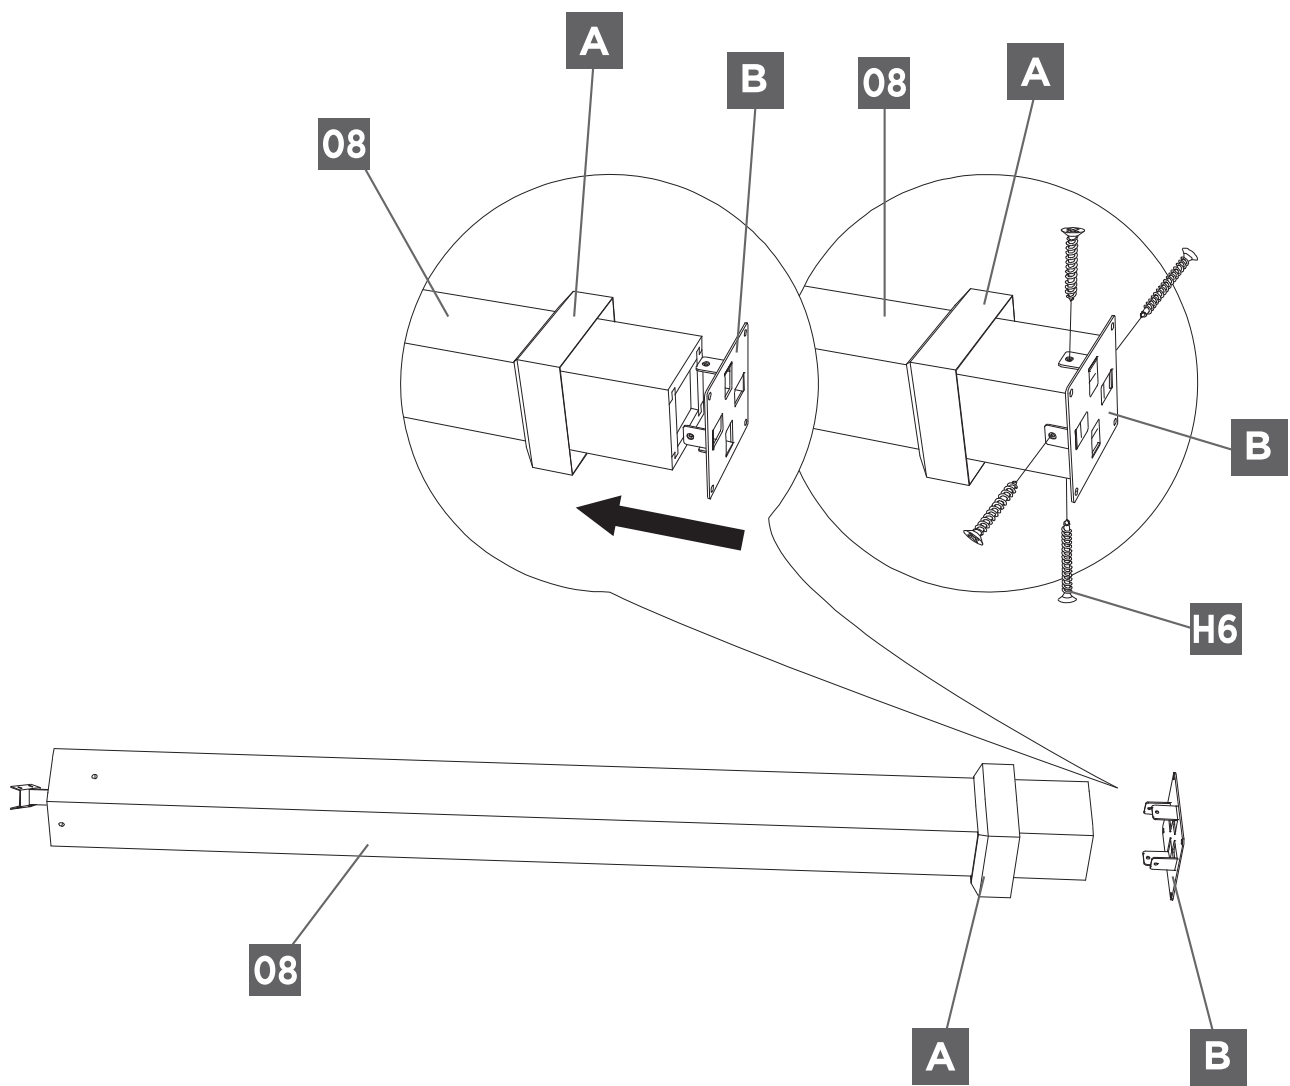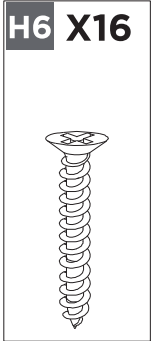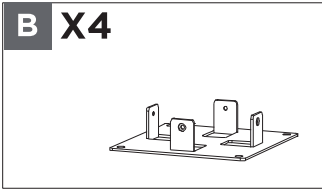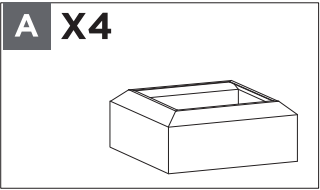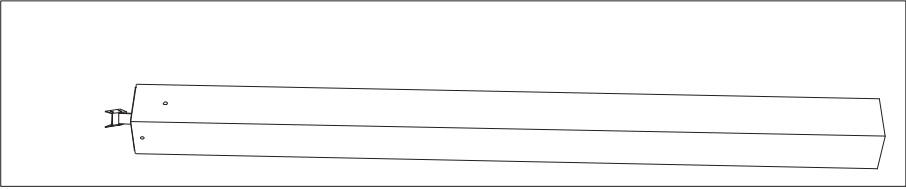


STEP-BY-STEP GUIDE

 STEP 3



21 X4

 



06 X4



05 X4




 H4 X16

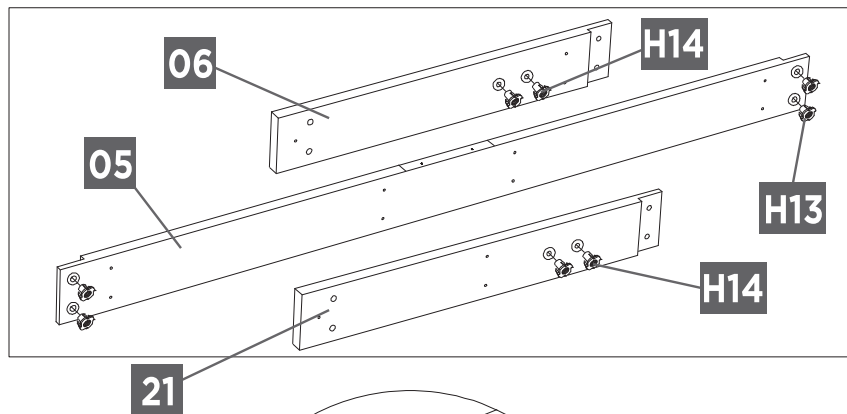


H13 X16

 
H14 X16



Drive the T-Nuts into the wood with hammer.

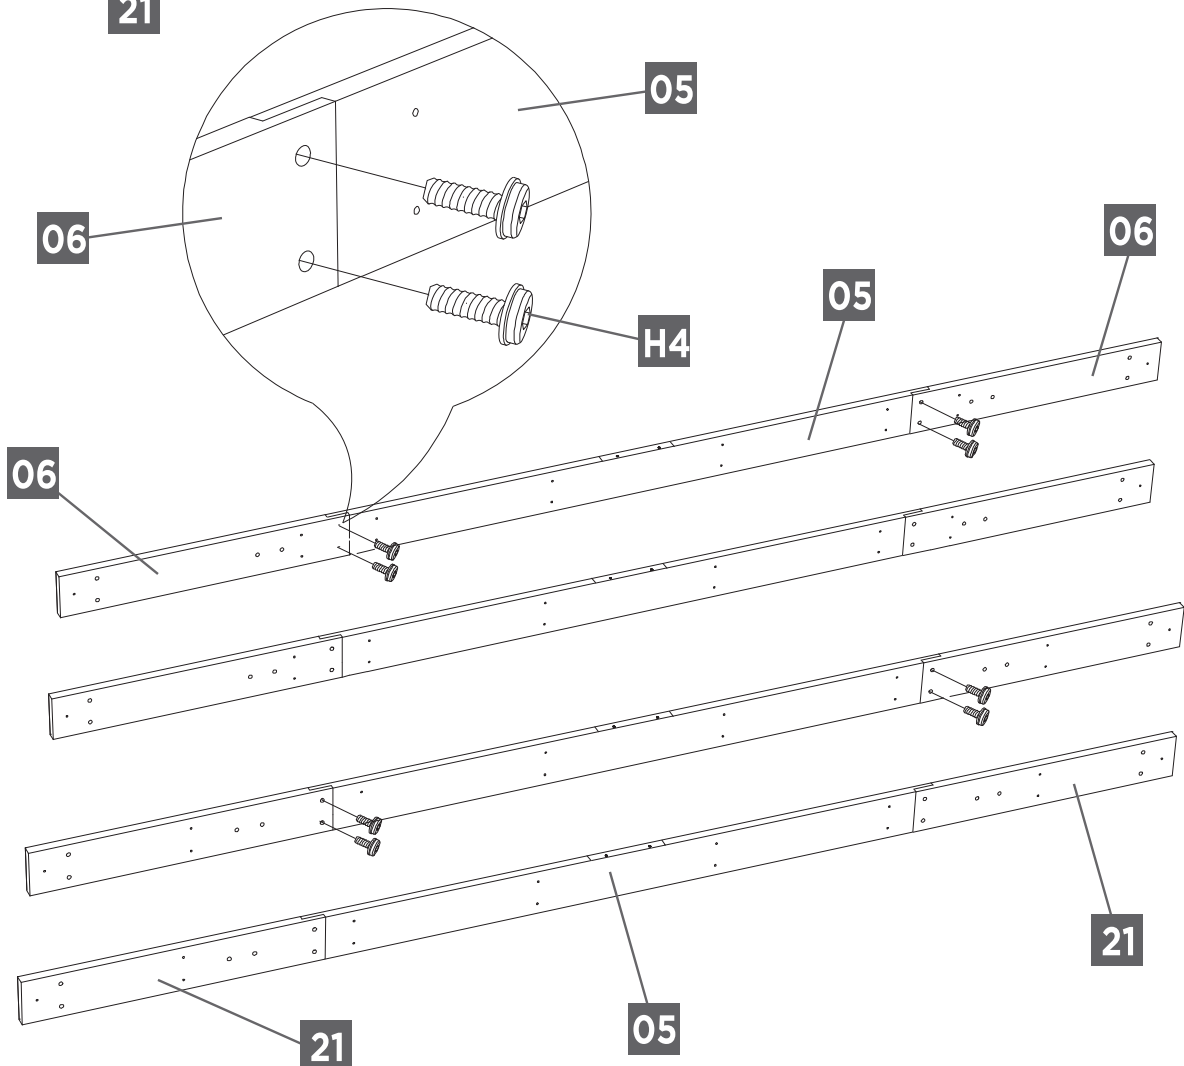

STEP 4

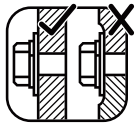

03 X4




 


04 X4






H13 X8

H4 X8

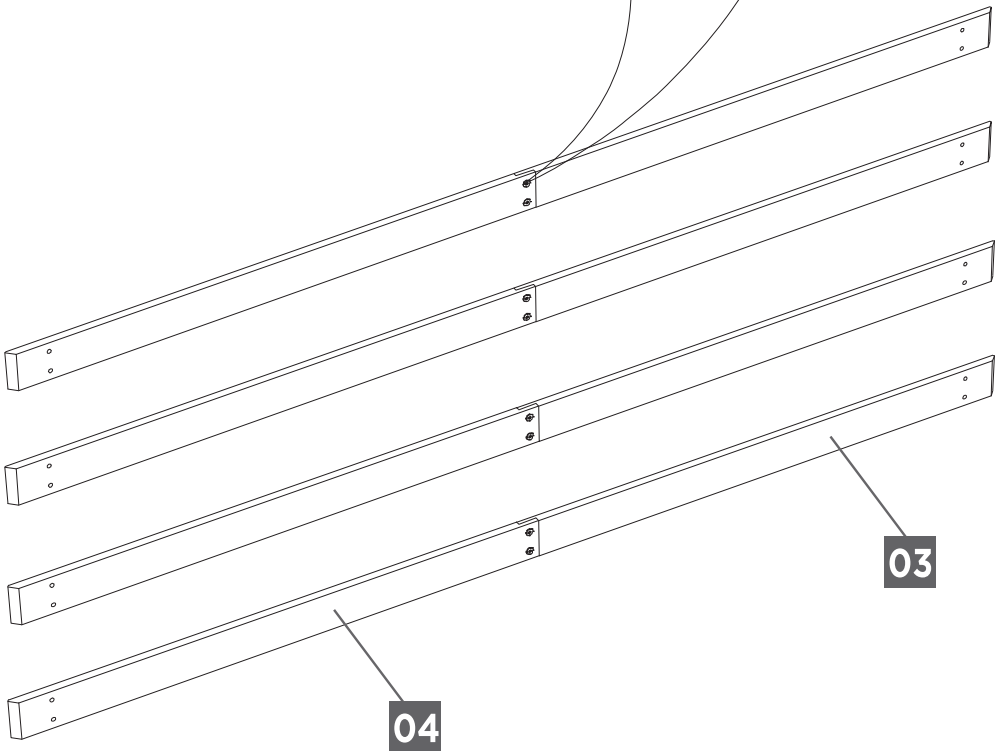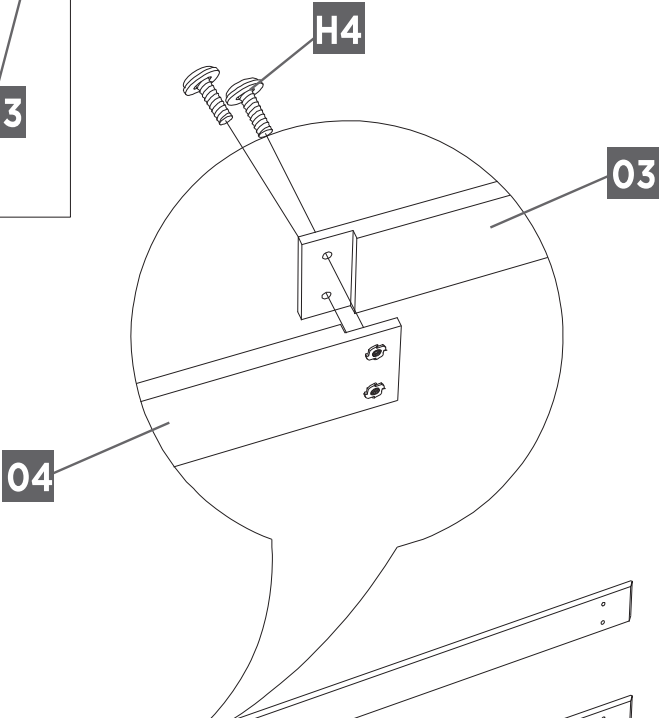
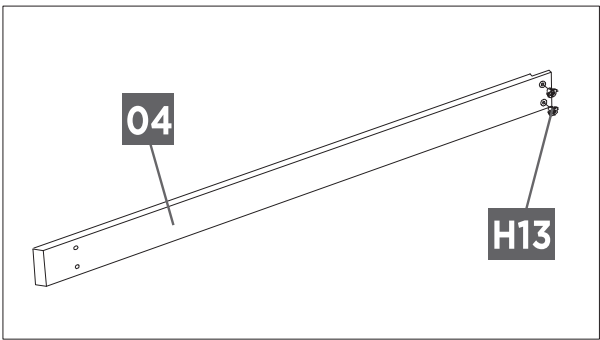



STEP-BY-STEP GUIDE

STEP 5

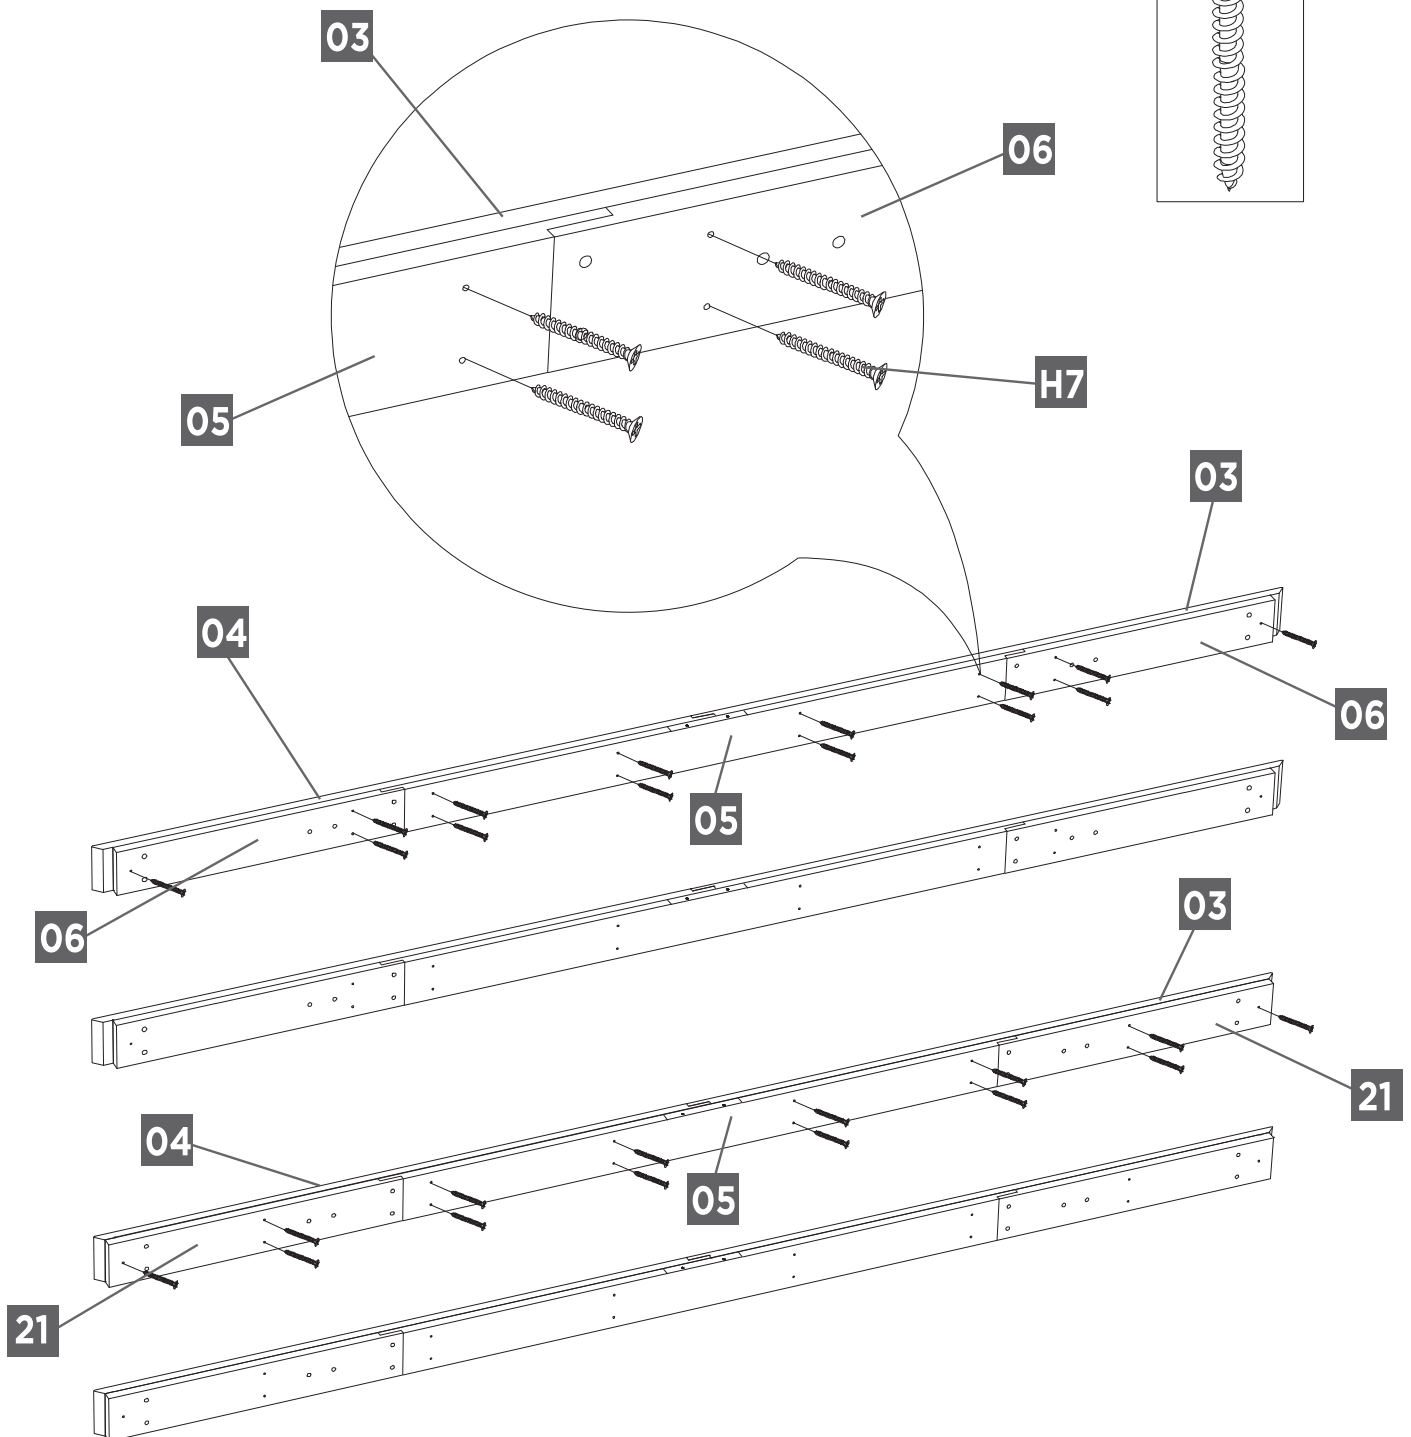
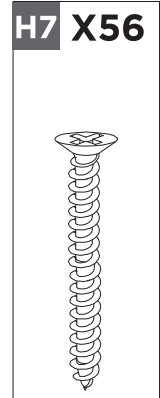
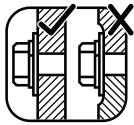



STEP 6

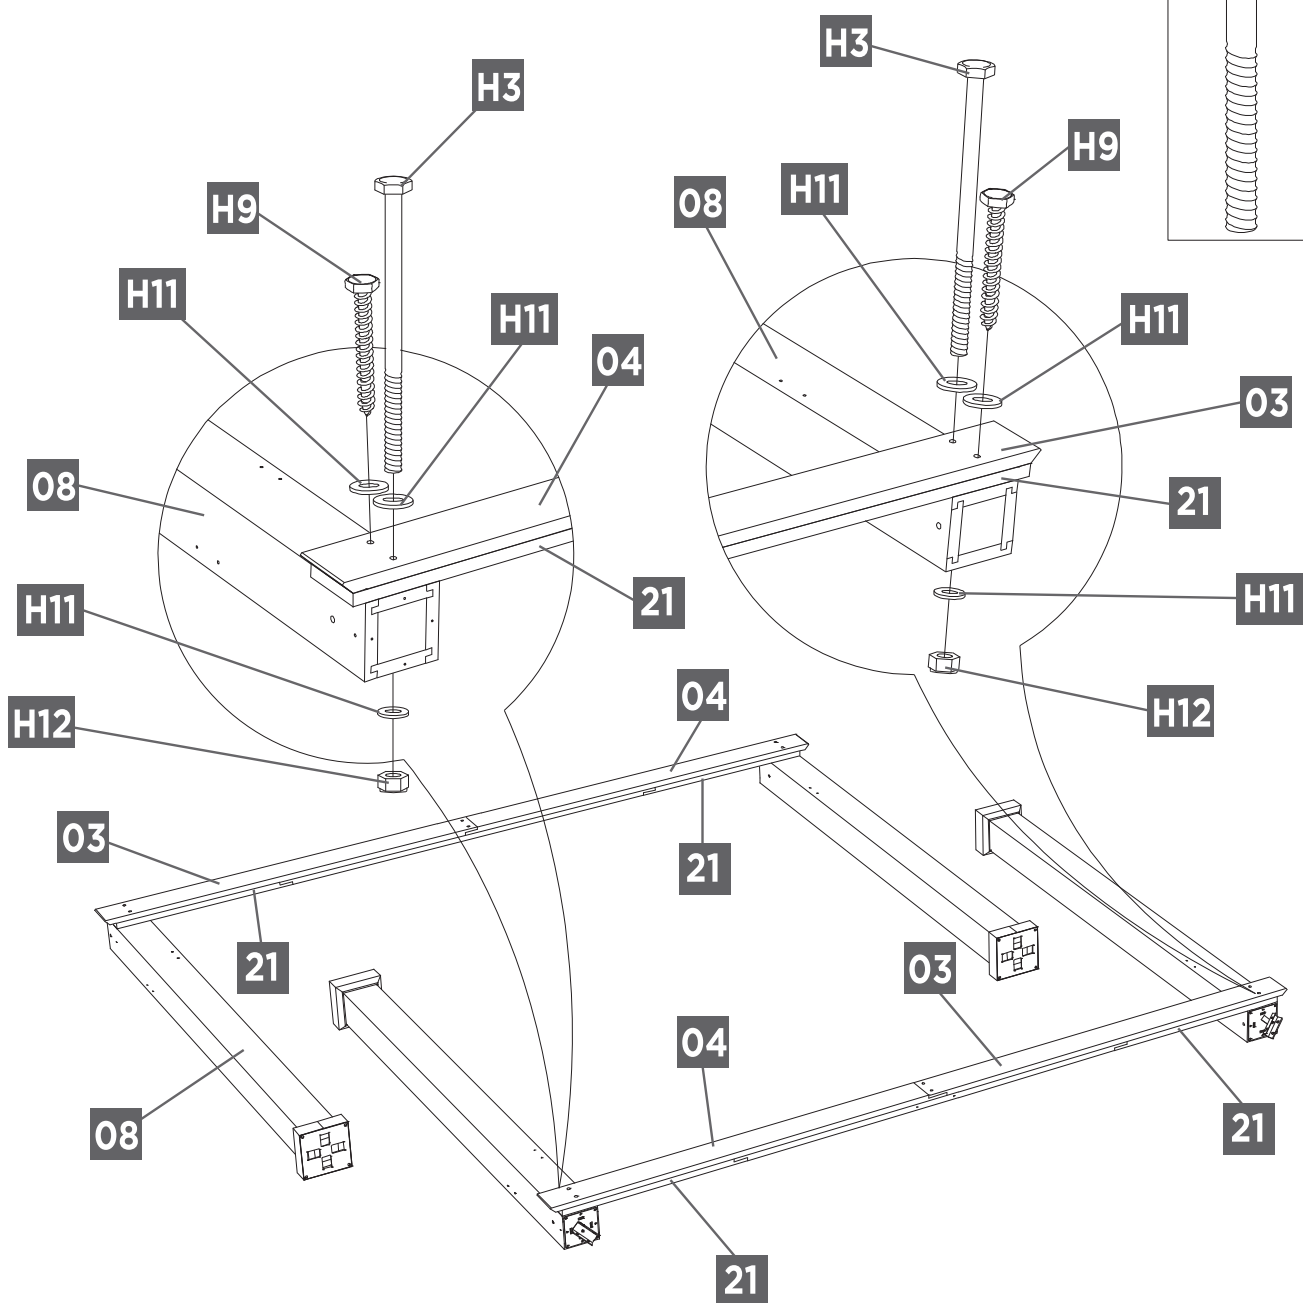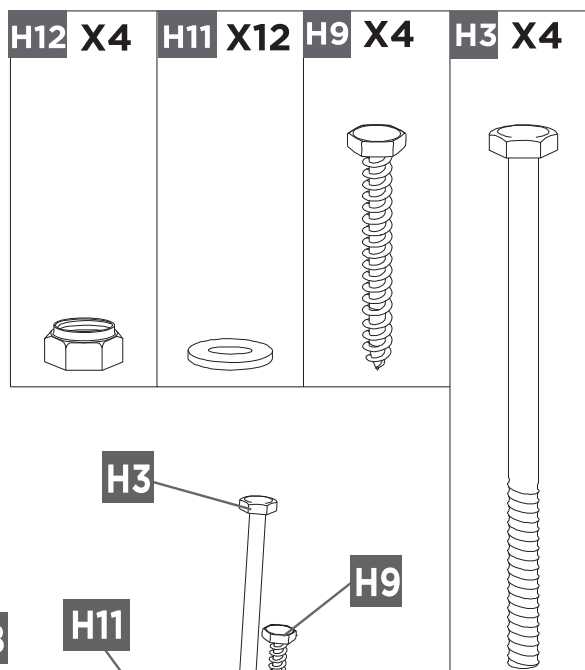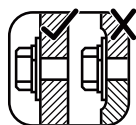

STEP-BY-STEP GUIDE

STEP 7

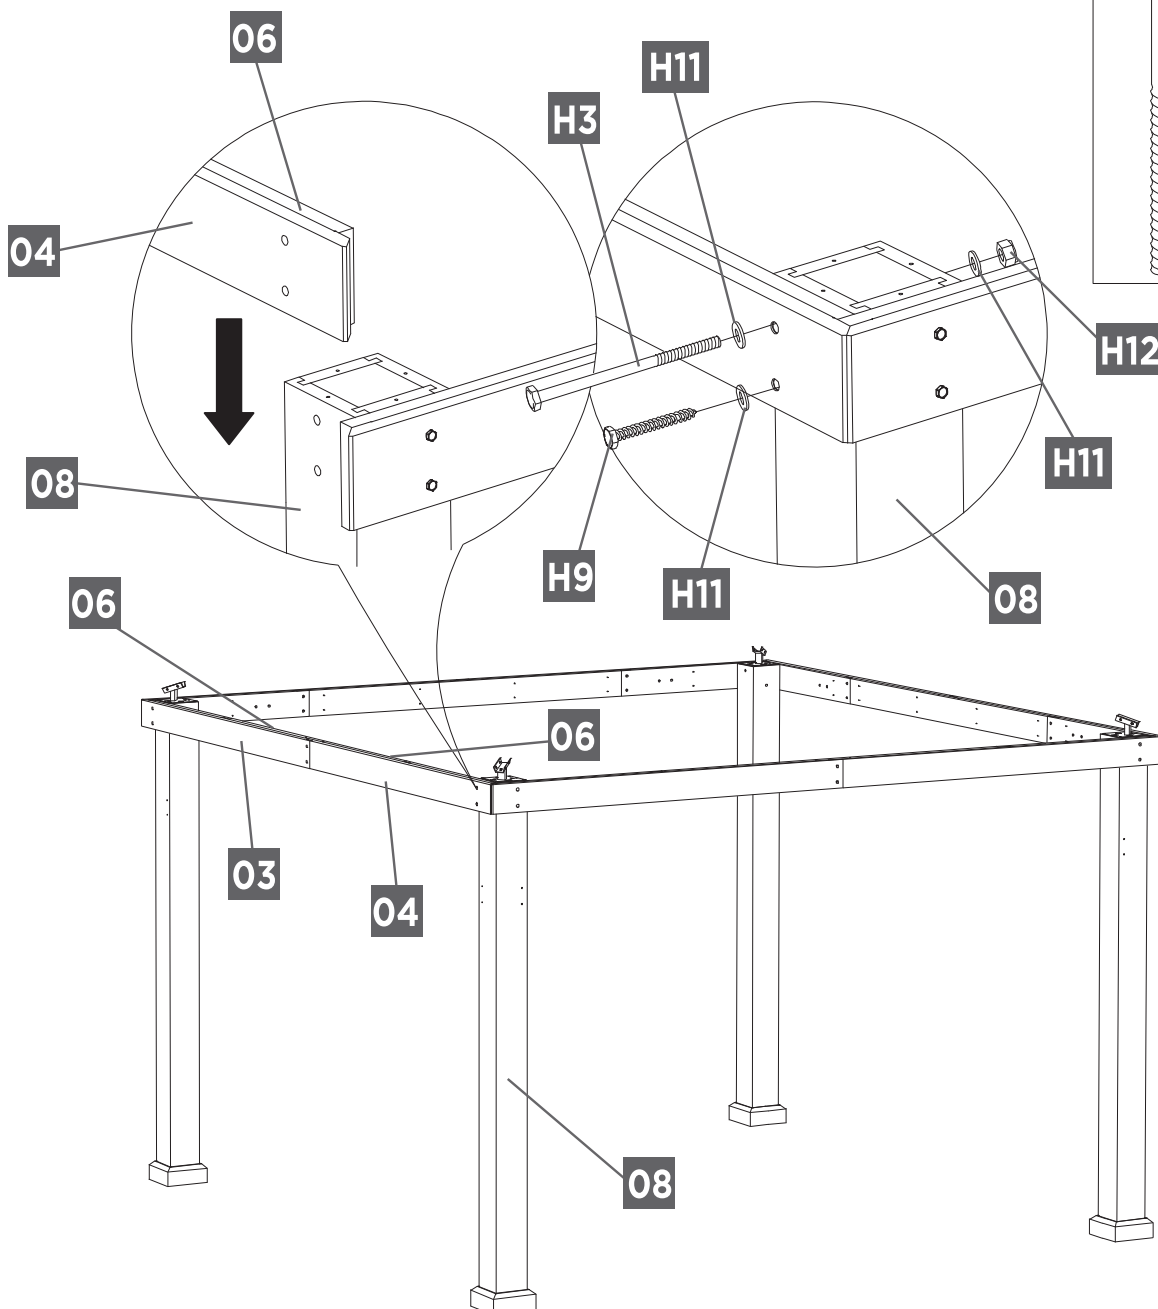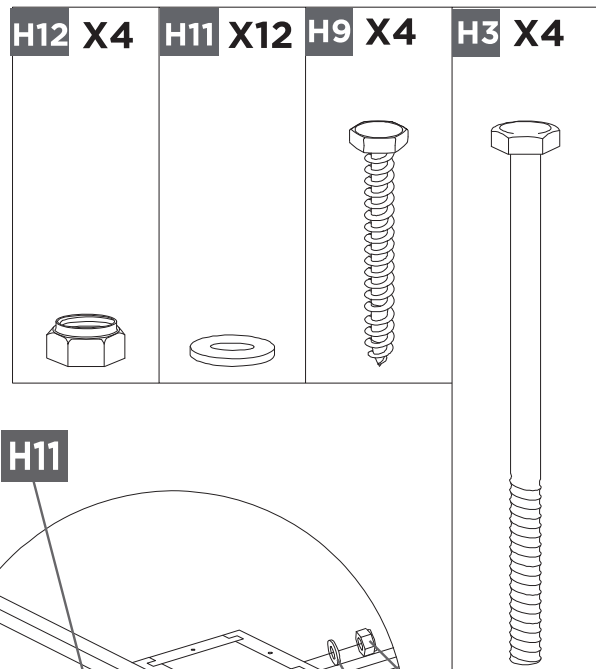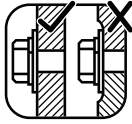

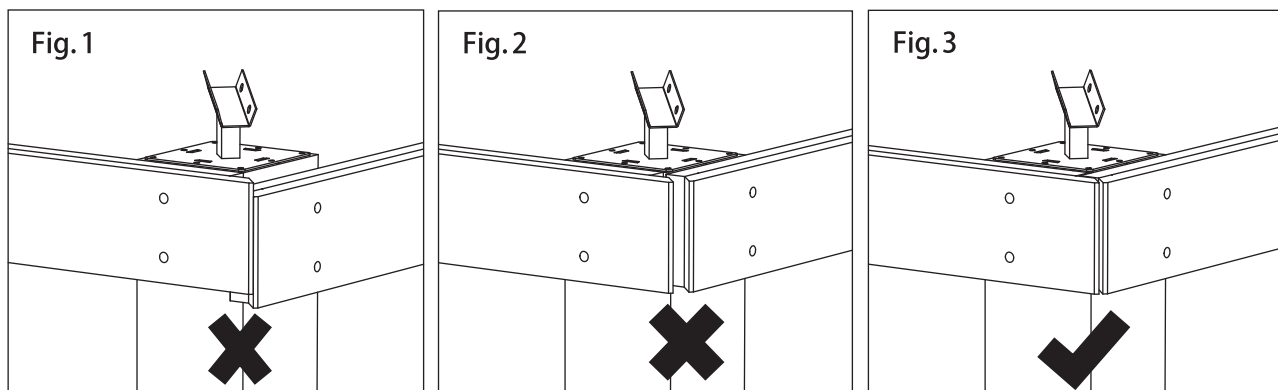

Do note that all 4 horizontal beams are to be horizontal and aligned (Fig. 1 shows wrong alignment). At the 4 corners of the horizontal beams, a small gap is left to allow for expansion of the wood.

 
While installing the horizontal beams it may be necessary to loosen the bolts and make adjustments to achieve a consistent gap at all 4 corners before tightening the bolts again.

Important notes:


- 1) Adjustment must be made prior to the installation of the roof.
- 2) Do not over-torque the mounting bolts. Over-torquing the bolts will crush the cedar wood.

STEP-BY-STEP GUIDE


STEP 8




10 X4

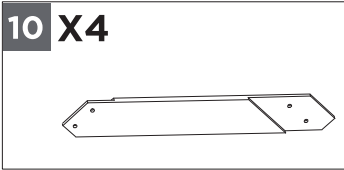


11 X4

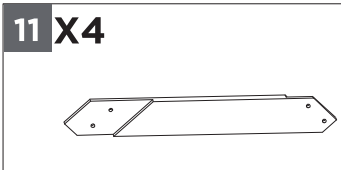


H10 X16

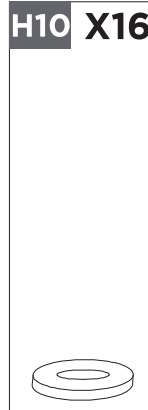


H5 X16

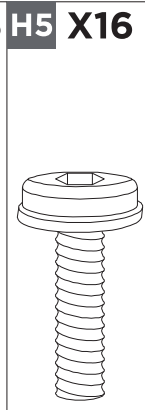


H8 X16

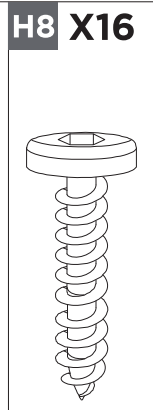




i $d1=d2$

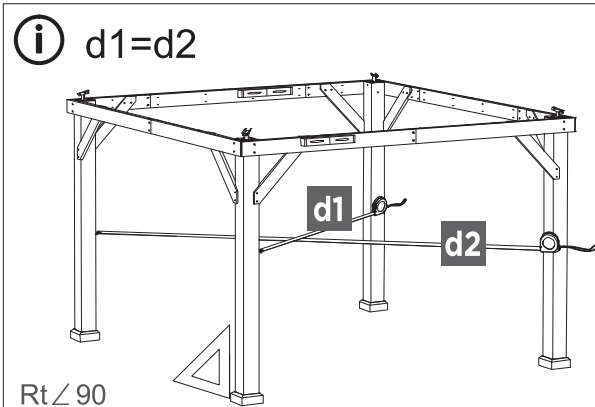

Assembly Tip:
We advise to measure the distance between d1 & d2 to ensure that they are equal in distance. In addition, it is best to use a bubble level gauge to ensure all the posts are upright.

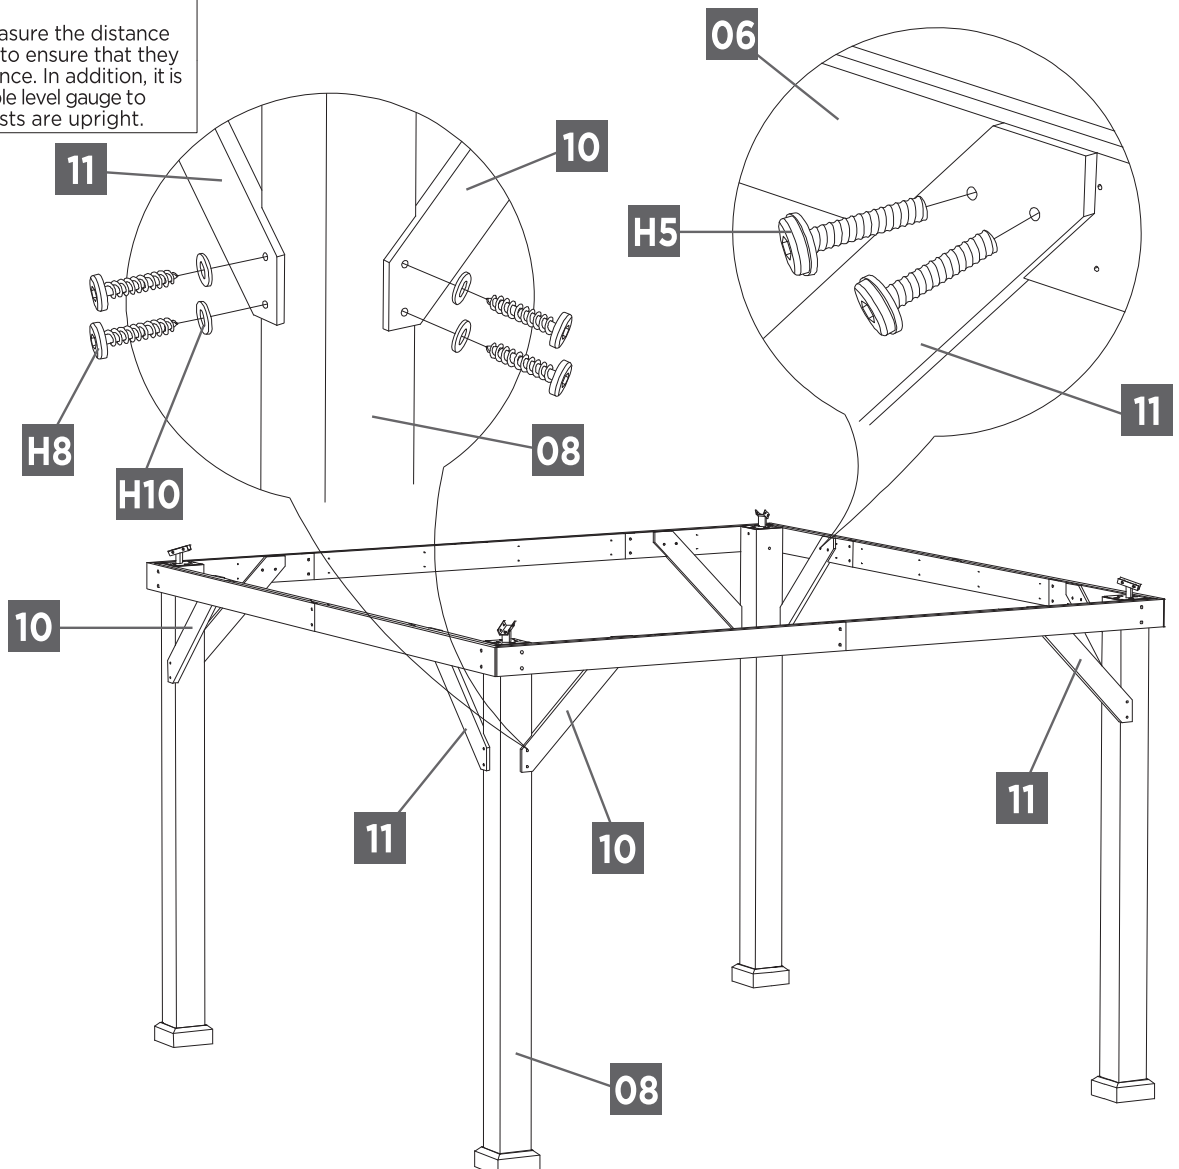

STEP 9

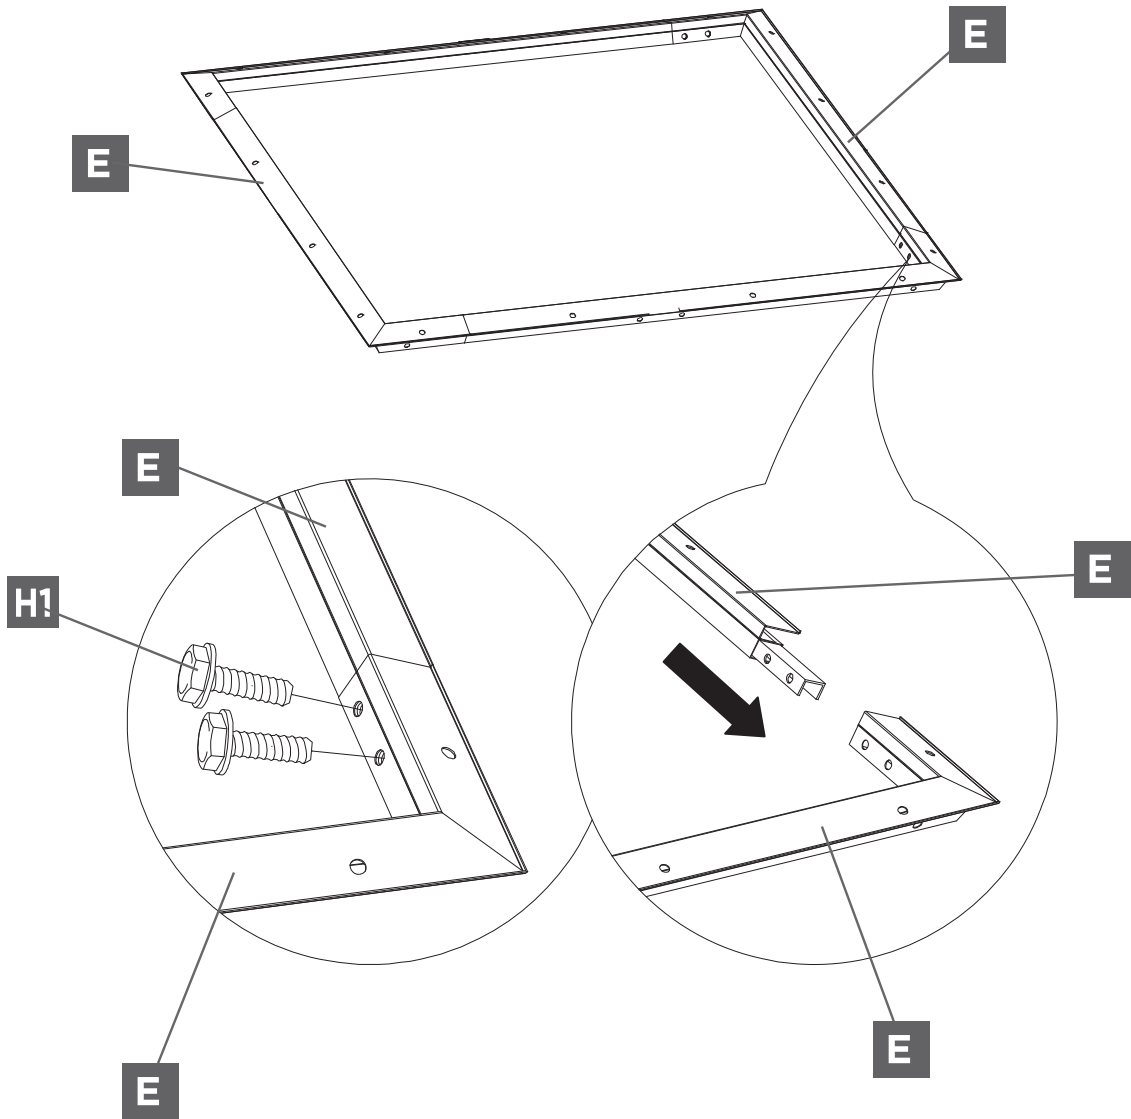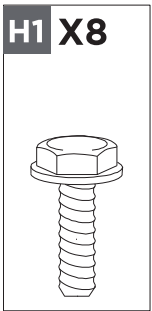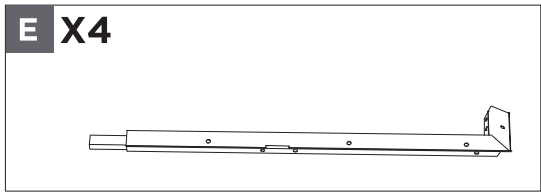

STEP-BY-STEP GUIDE


 
STEP 10




F X4




H1 X16

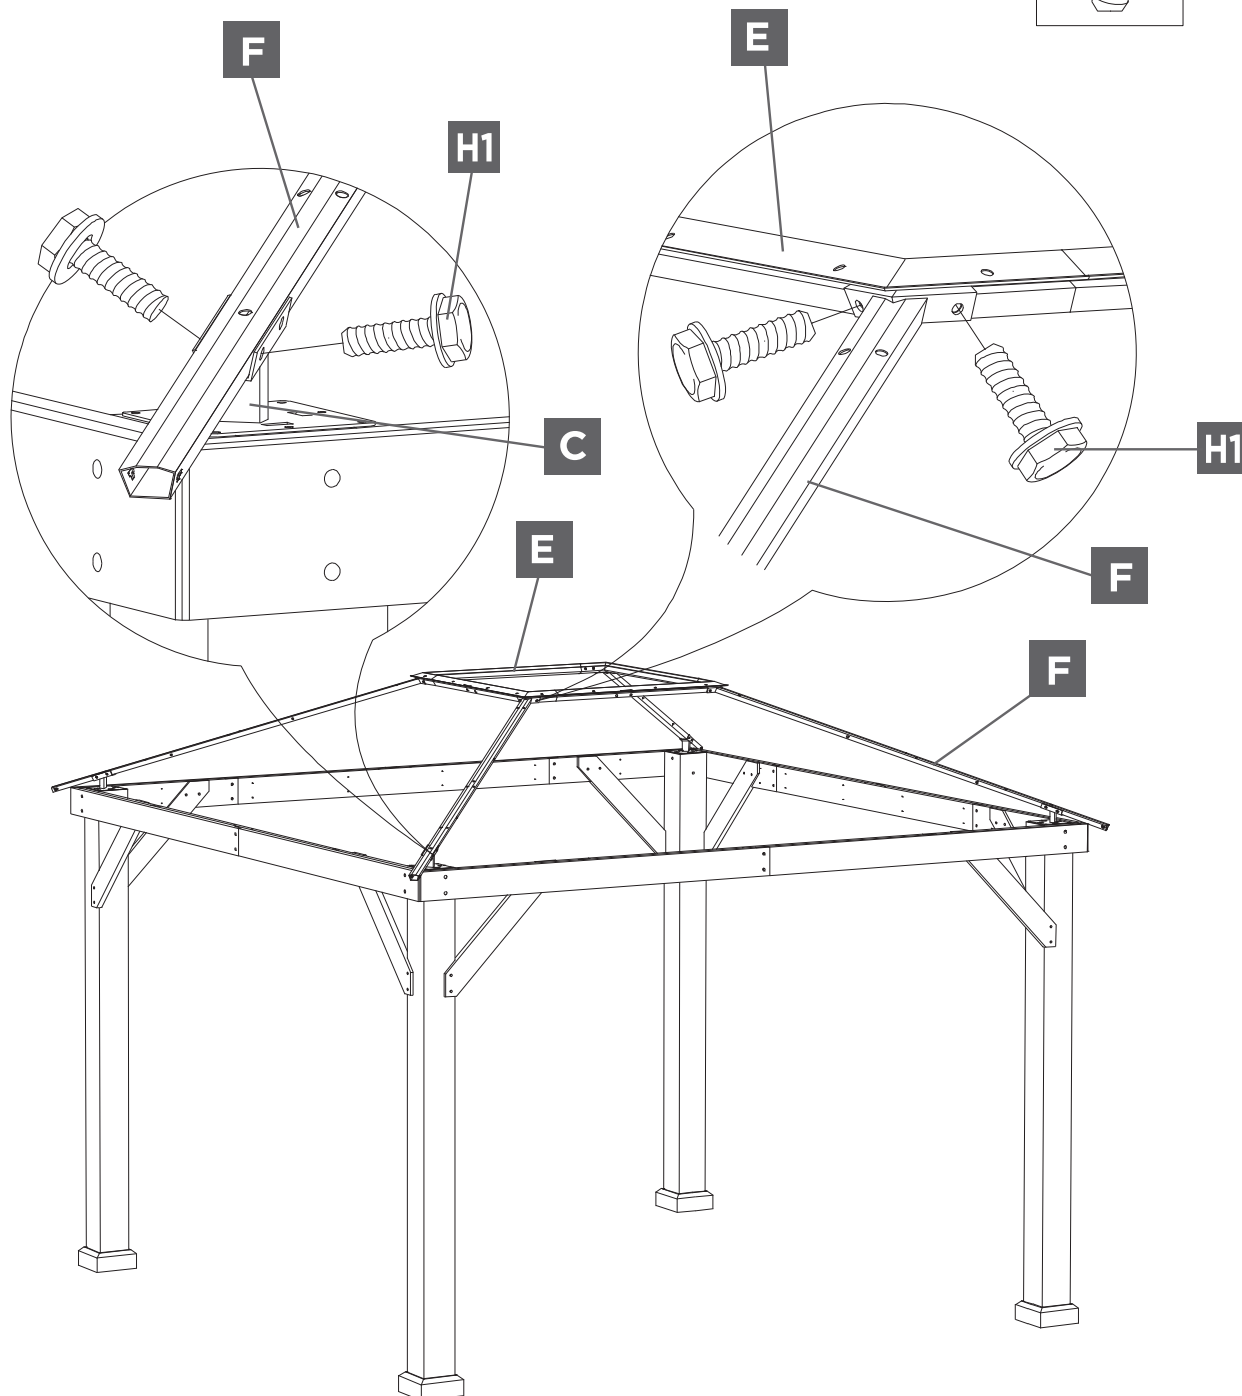


STEP 11

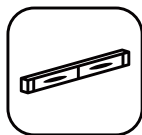



G X4

 

D X4

 


H1 X8


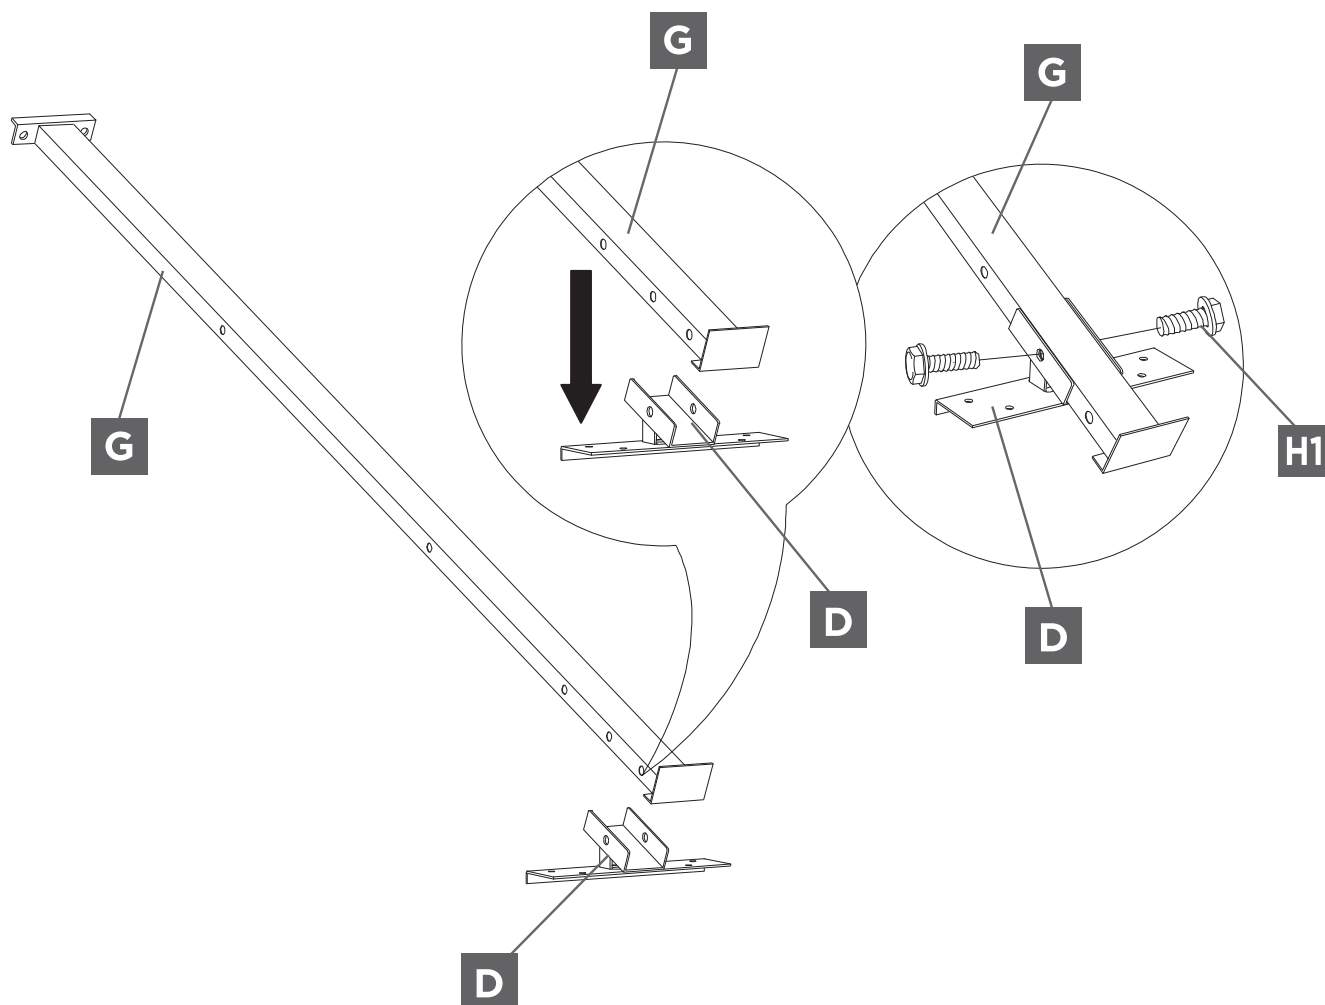
 


STEP-BY-STEP GUIDE

STEP 12




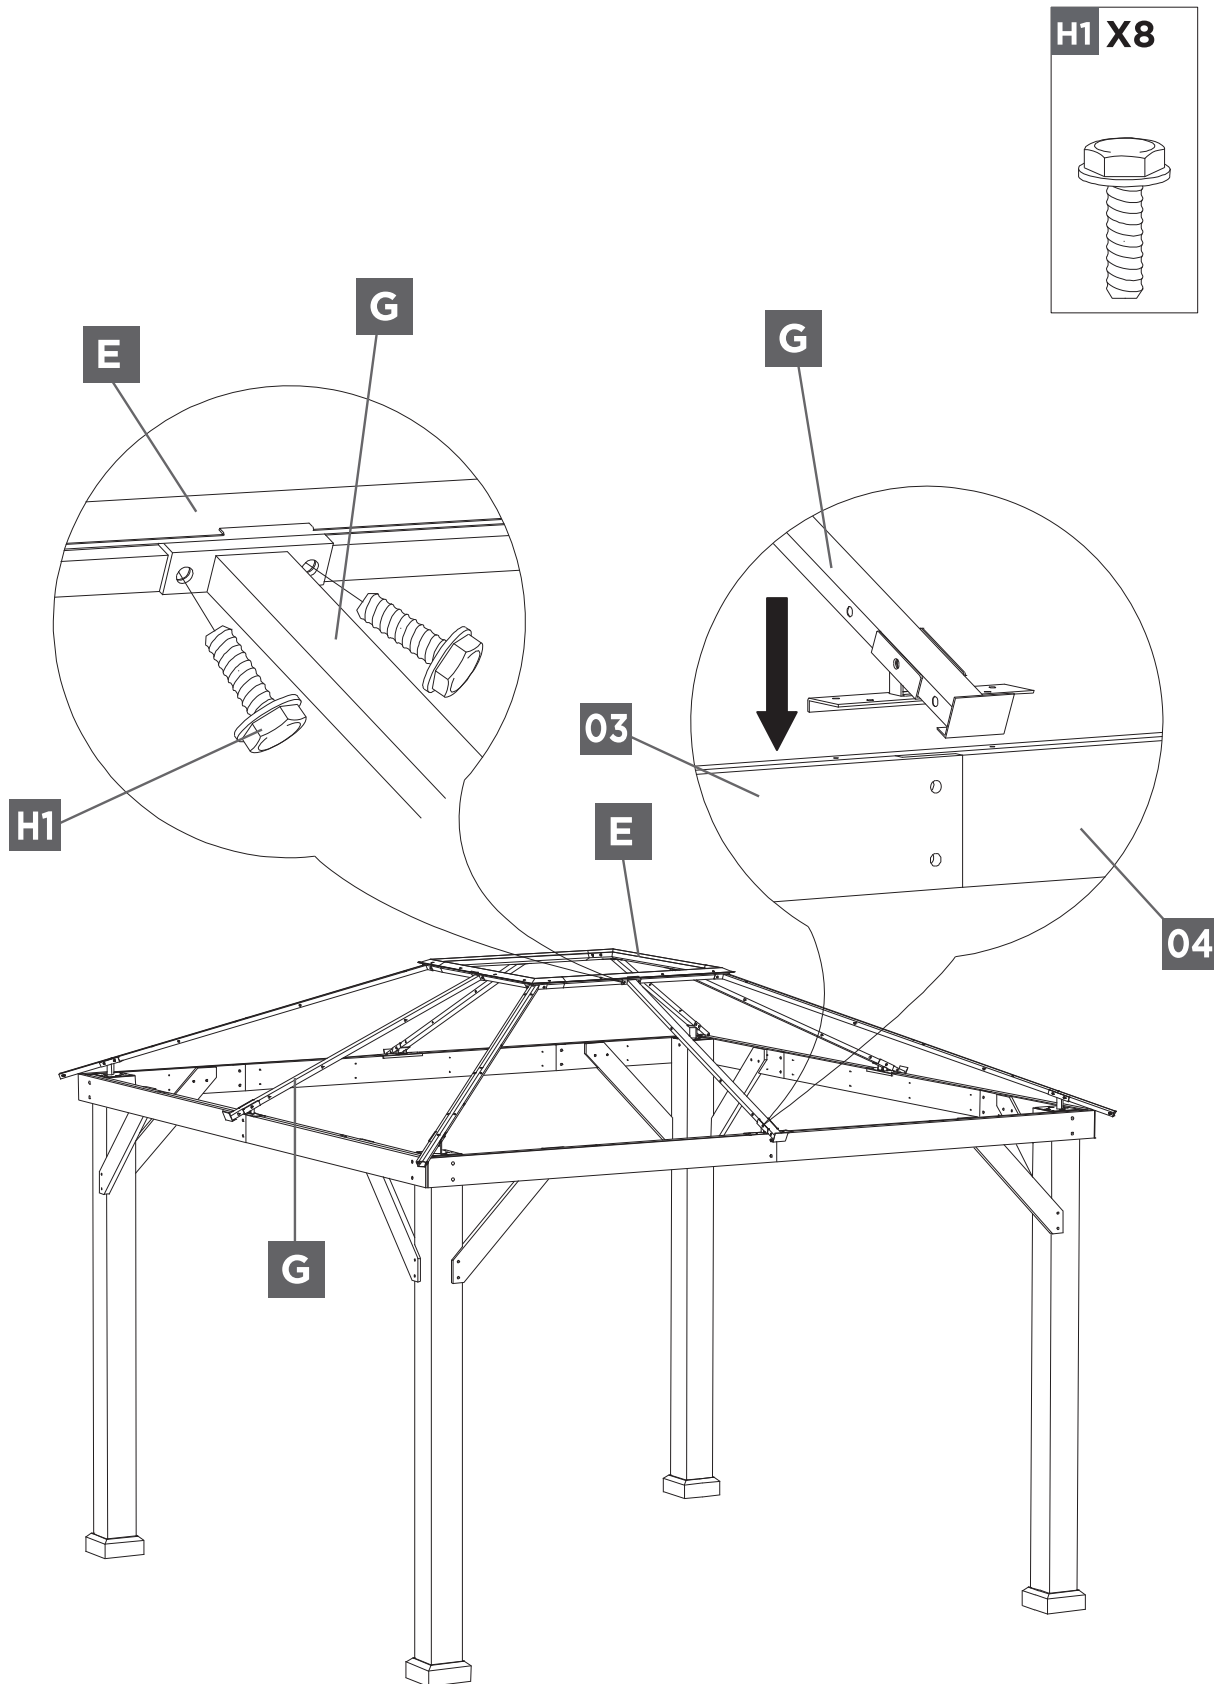


STEP 13

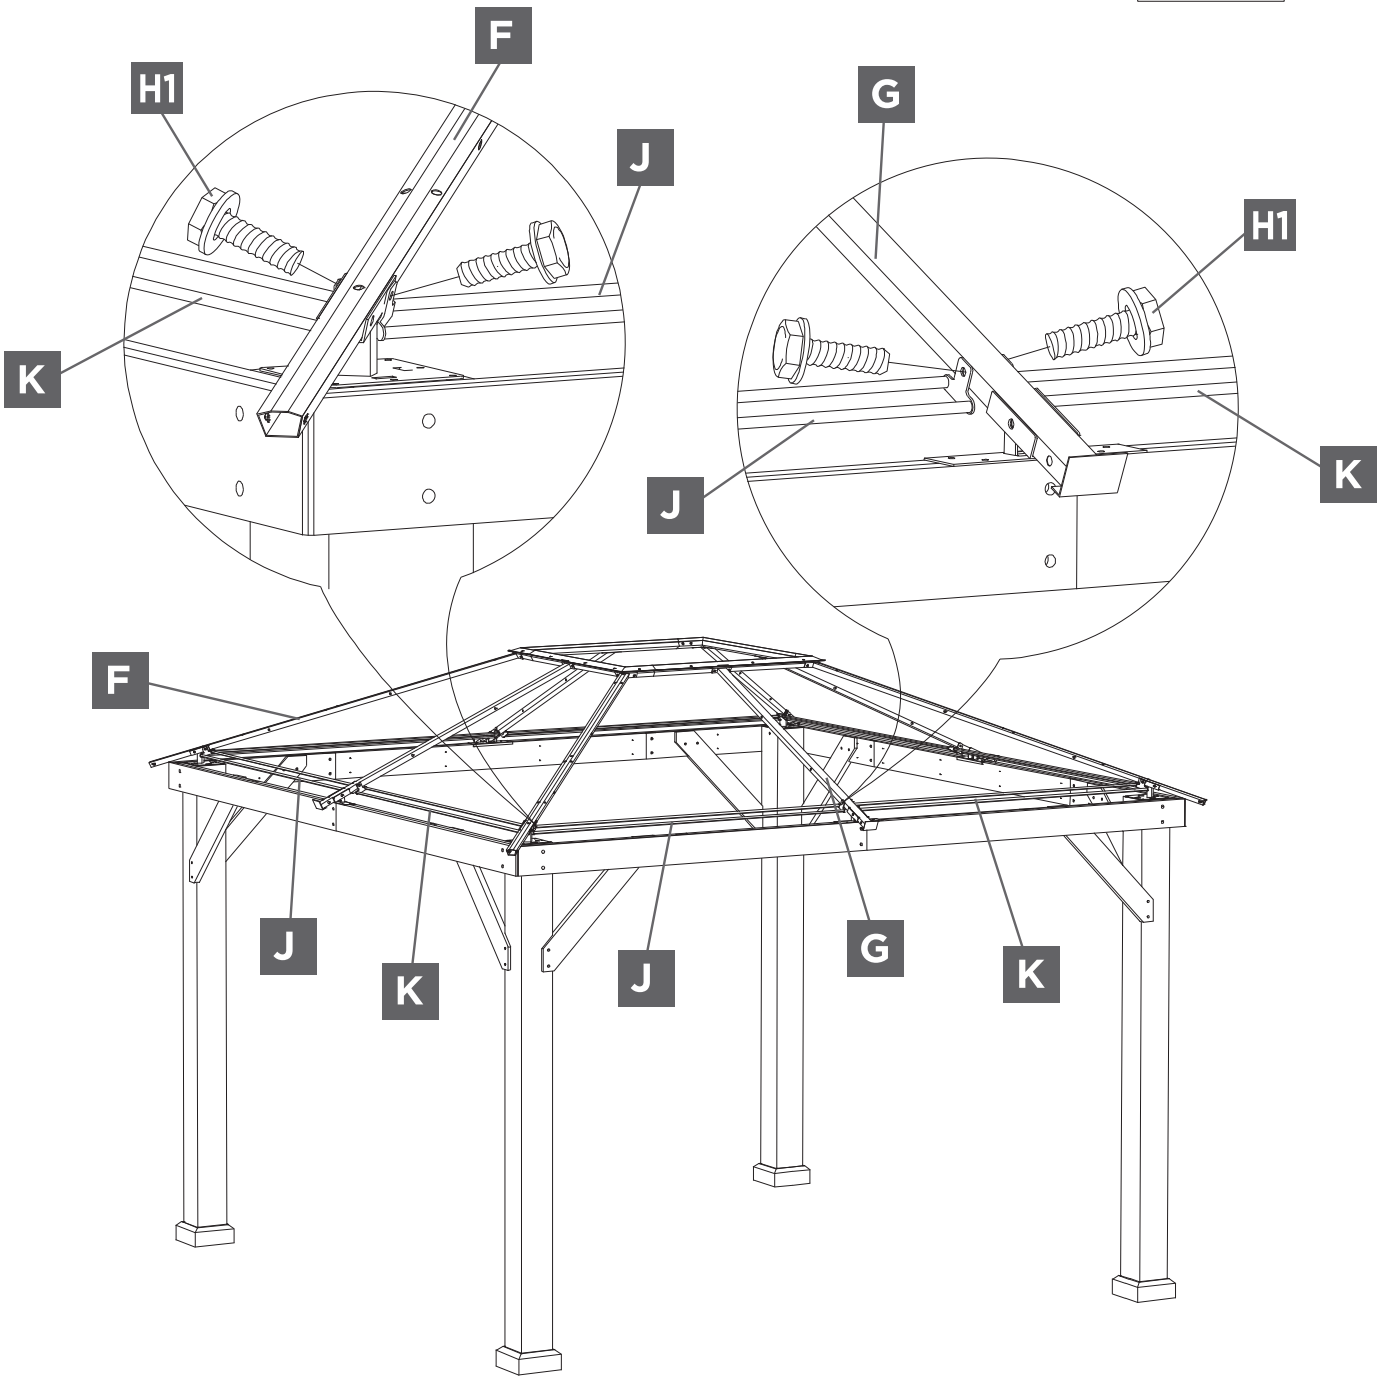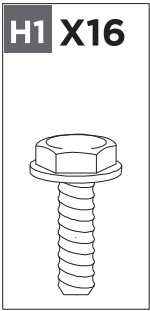
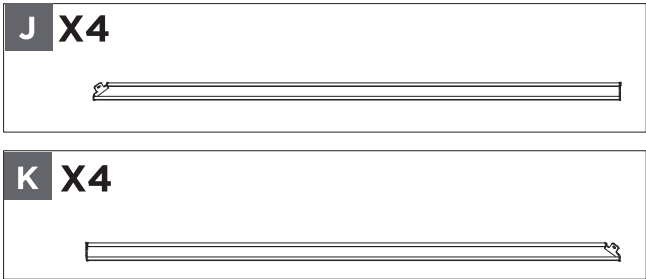


STEP-BY-STEP GUIDE

STEP 14

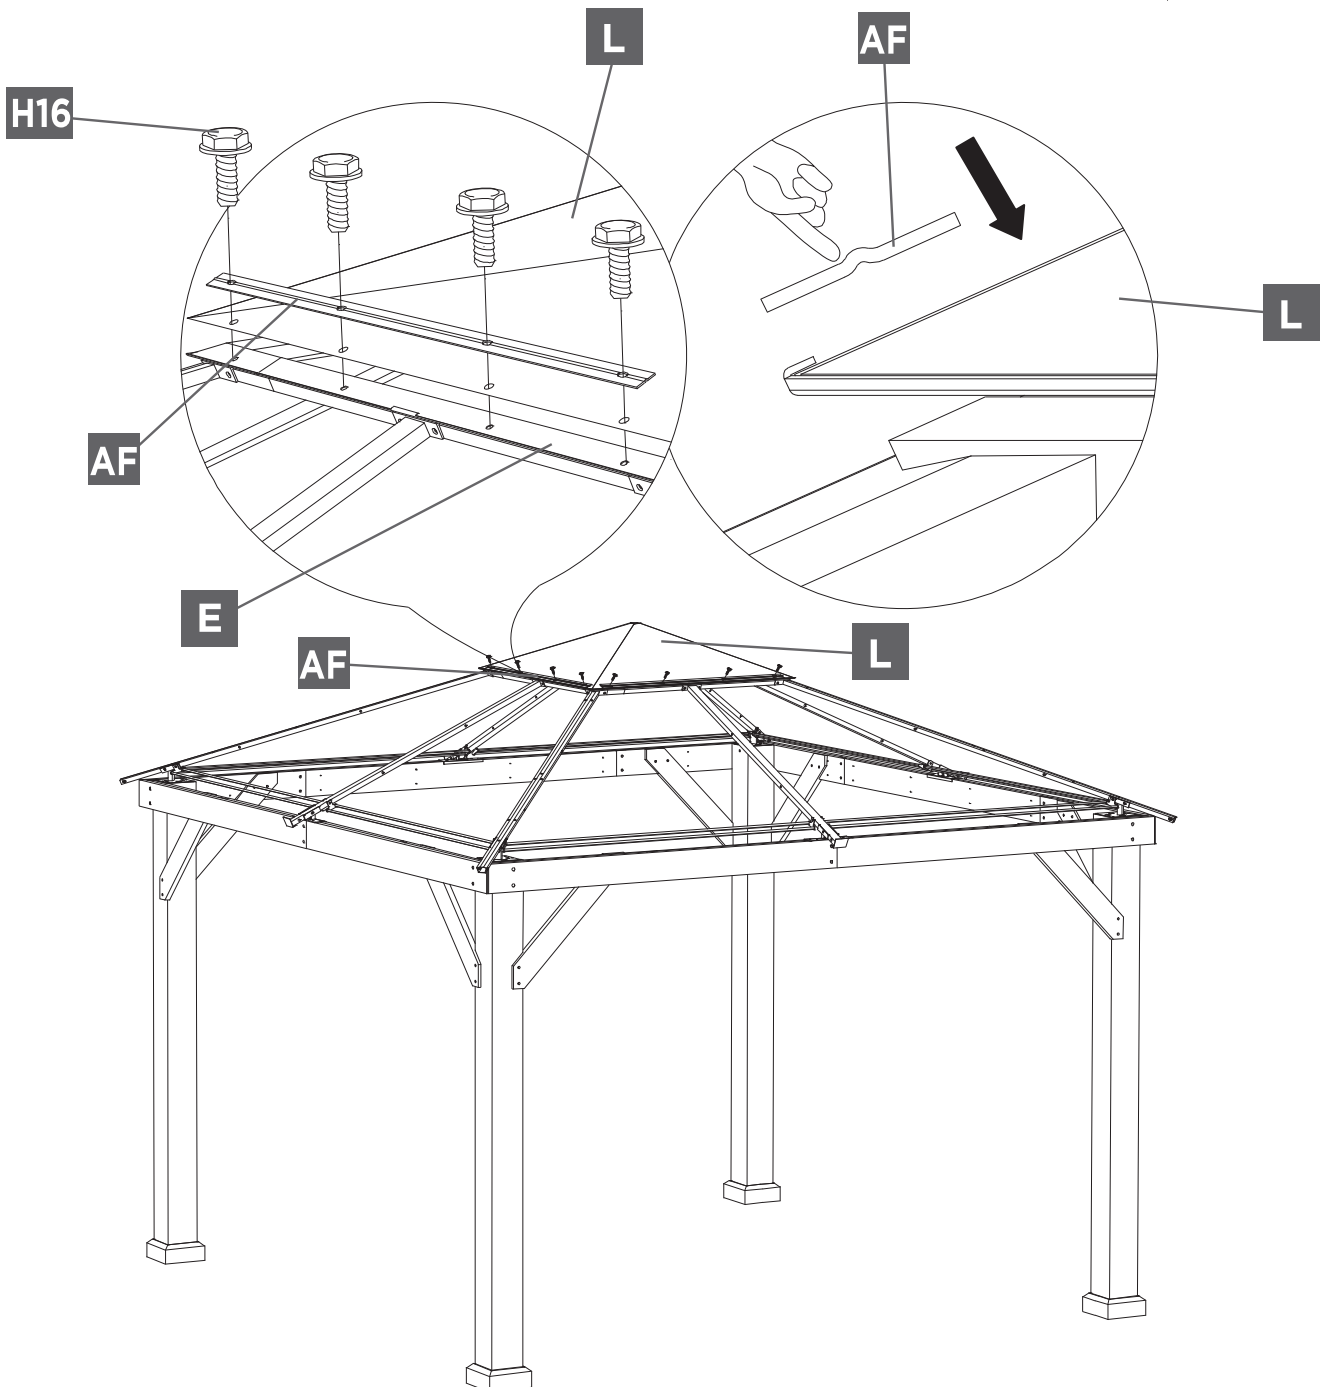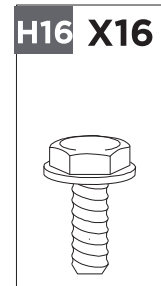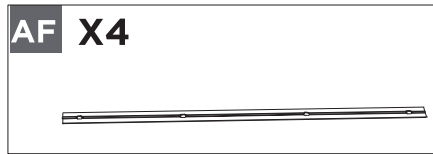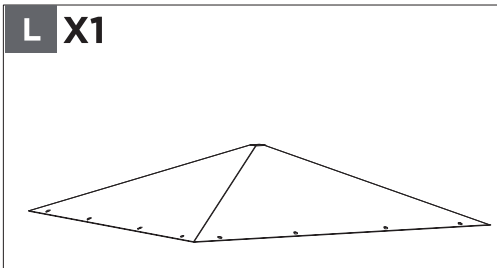

STEP 15

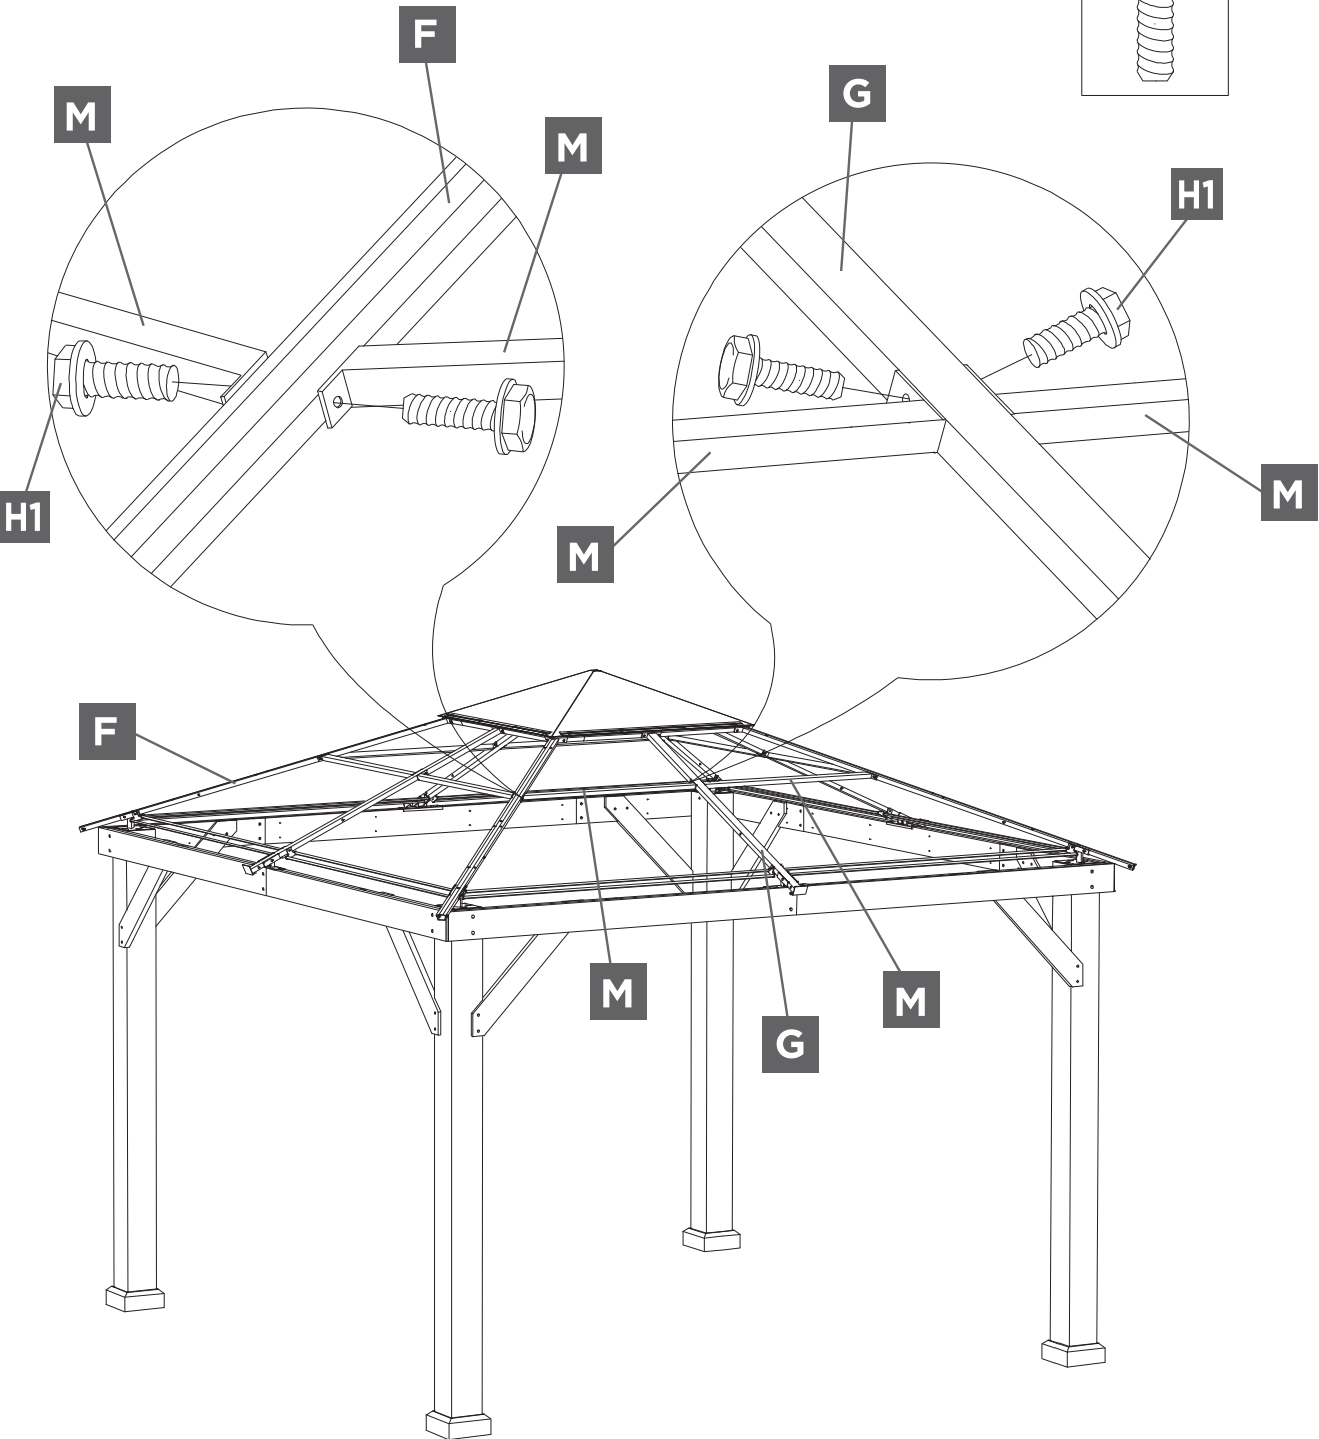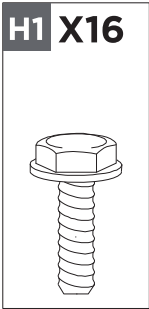



STEP-BY-STEP GUIDE

STEP 16


N X8



 H1 X16



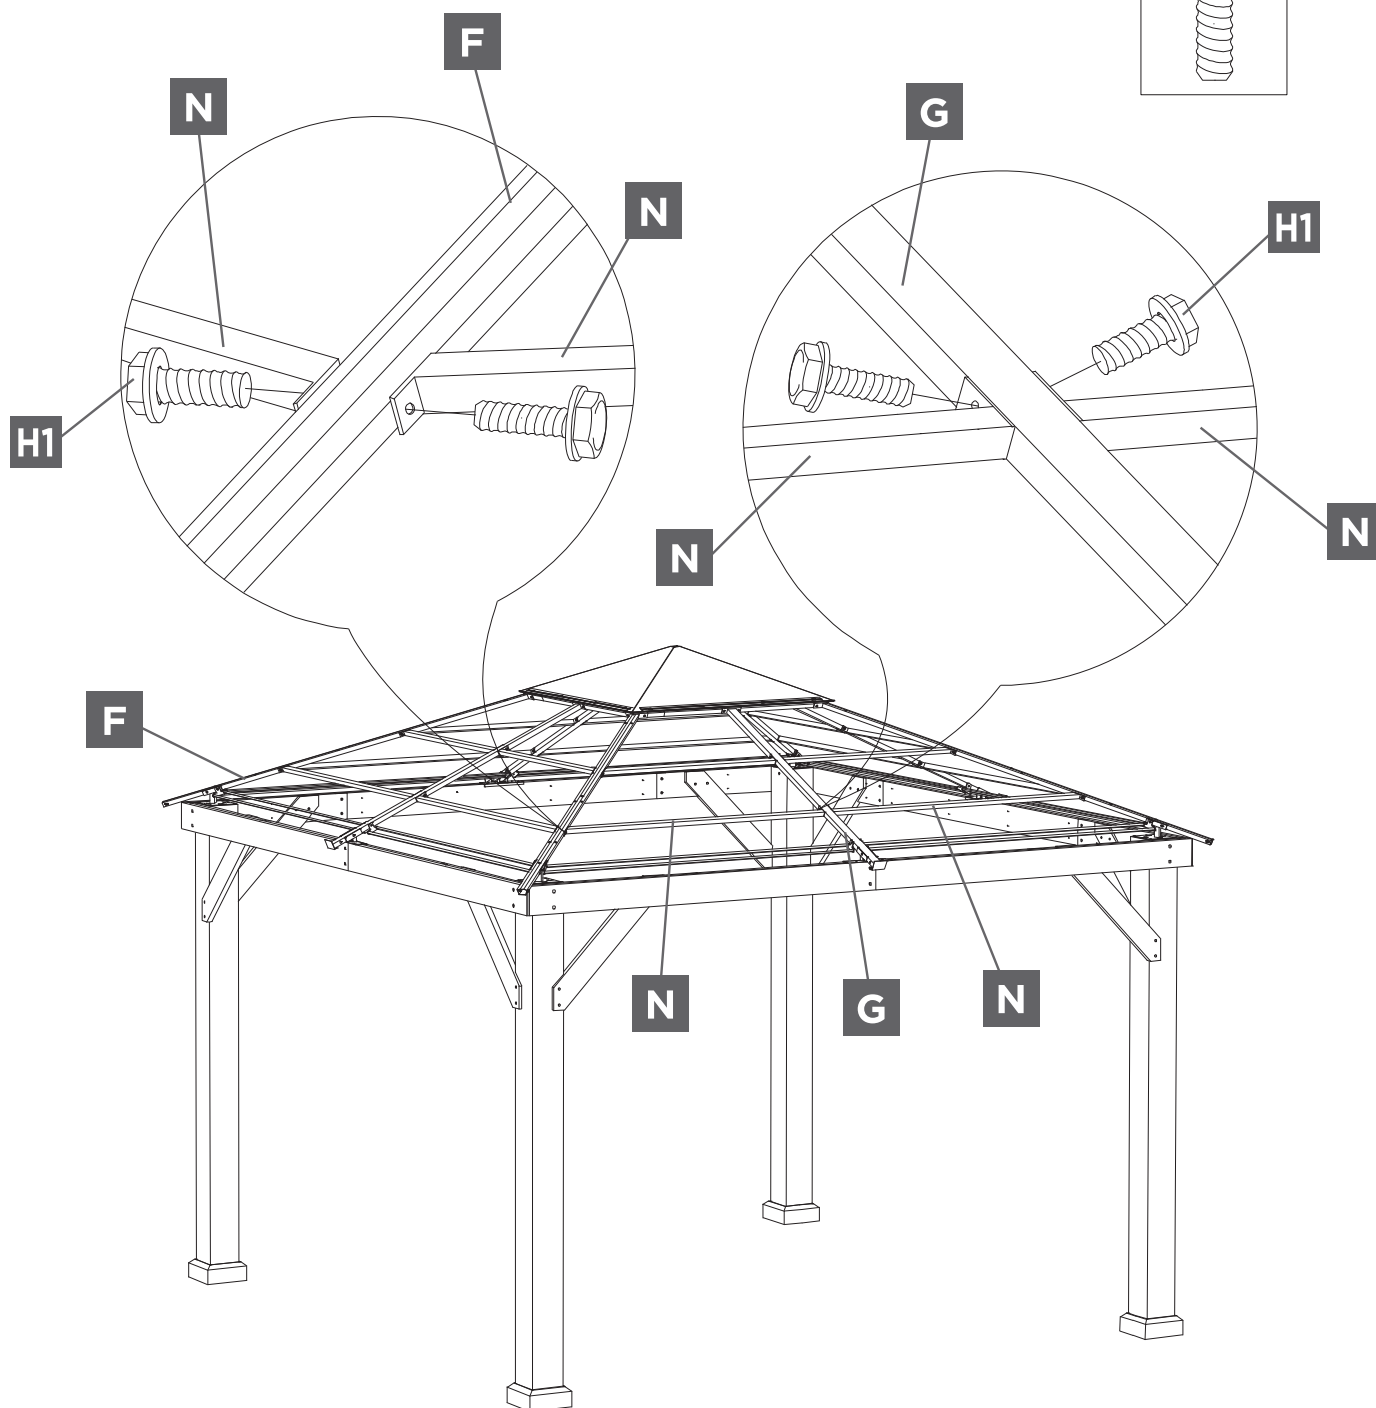



STEP 17




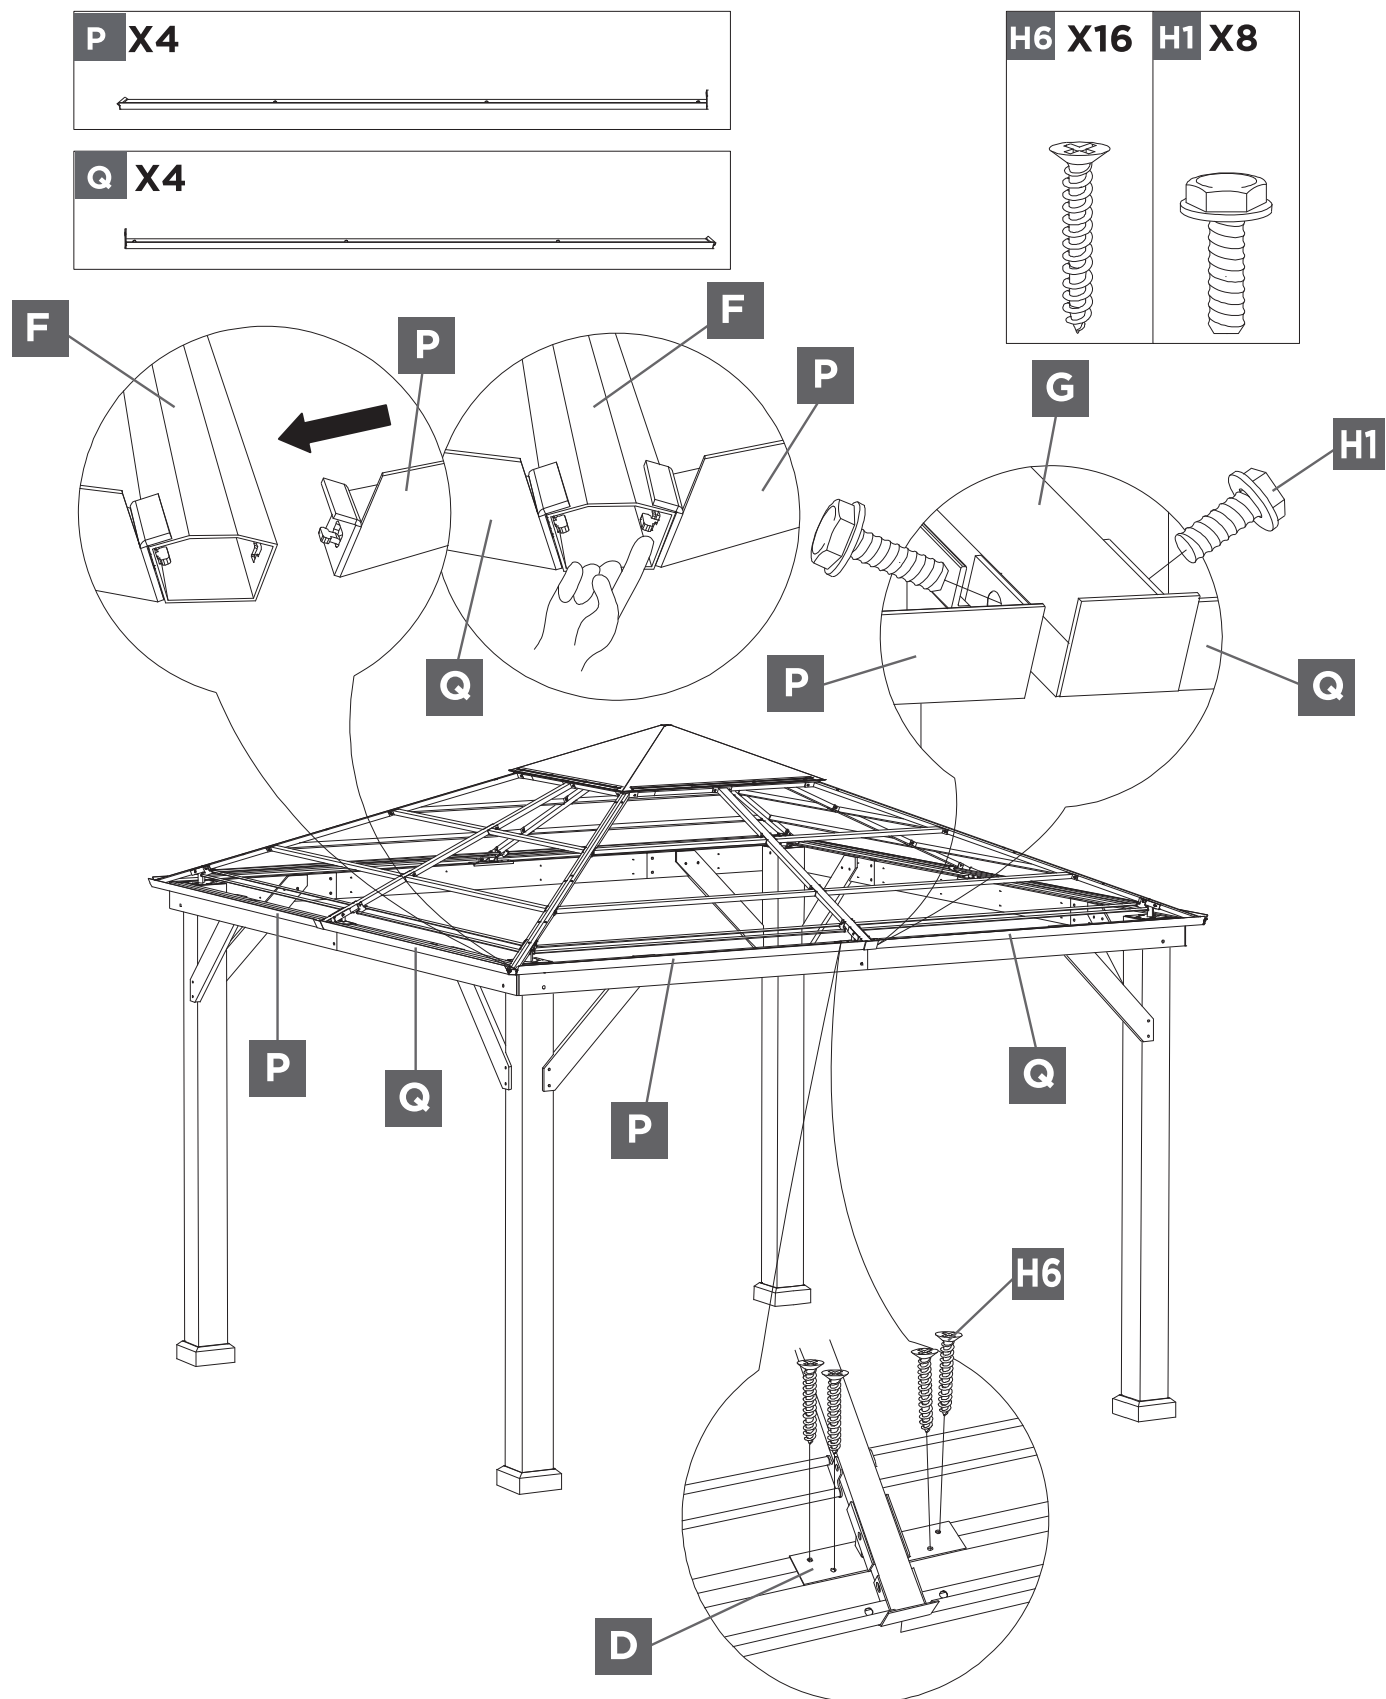


STEP-BY-STEP GUIDE

STEP 18

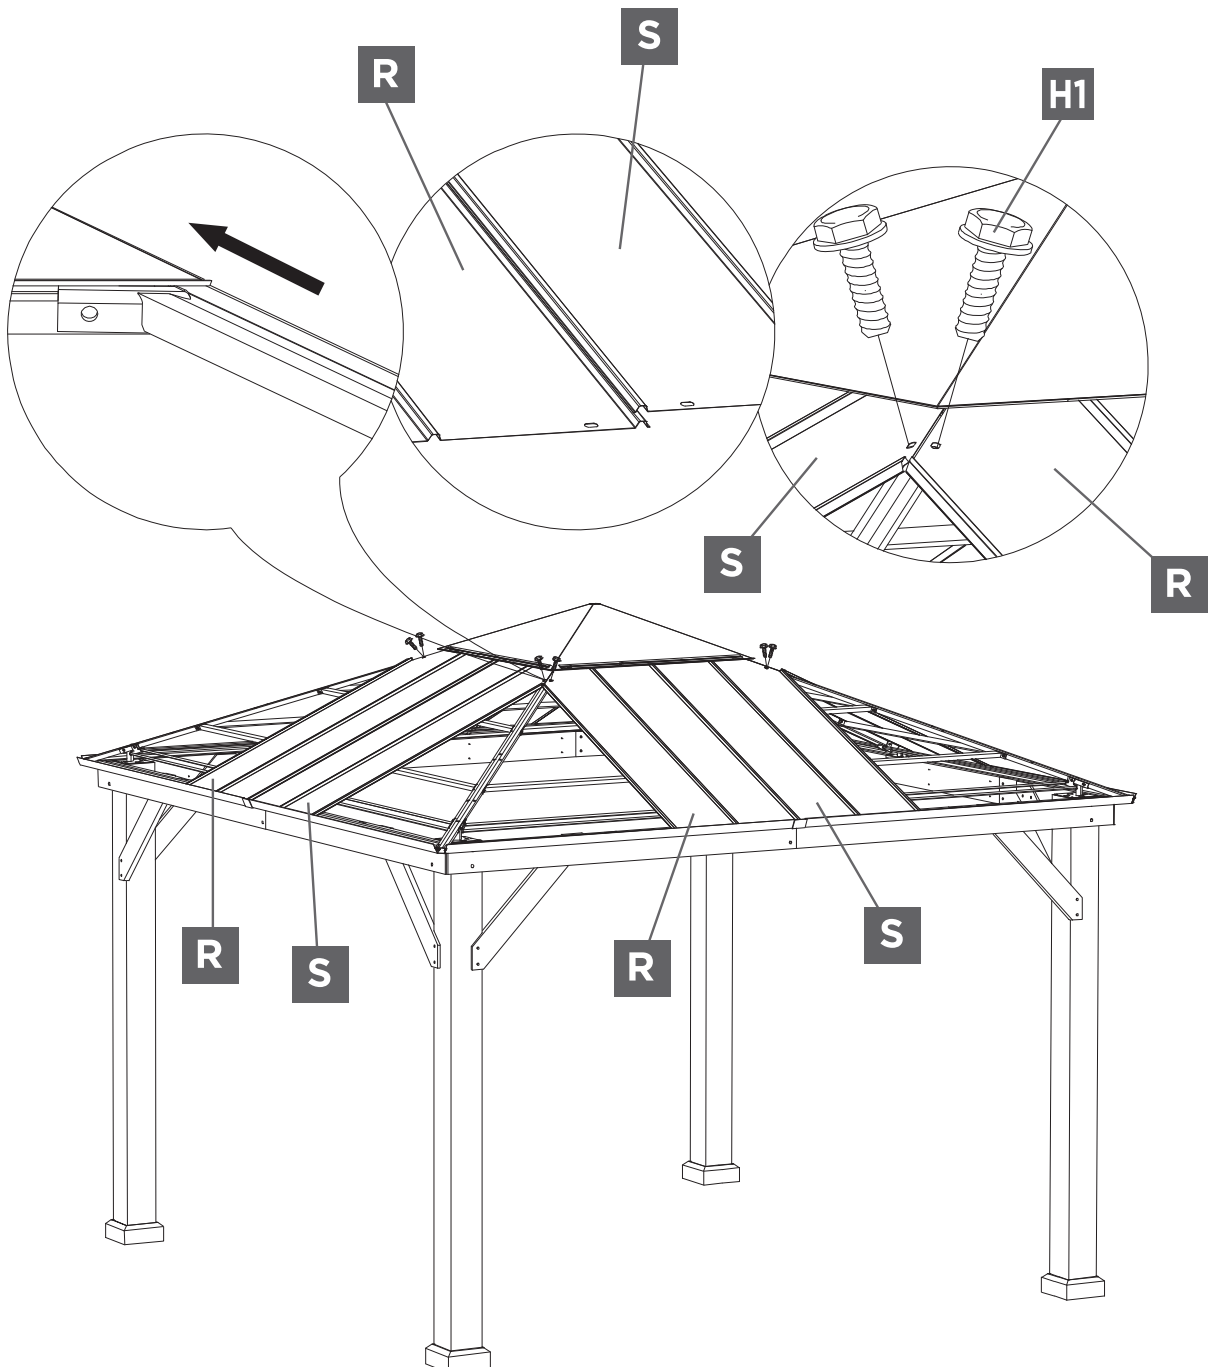
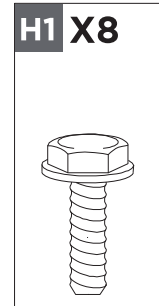
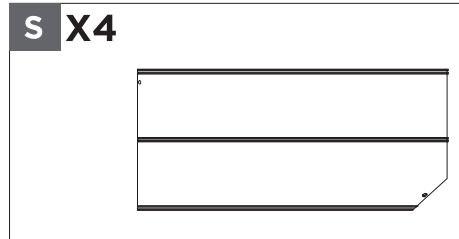
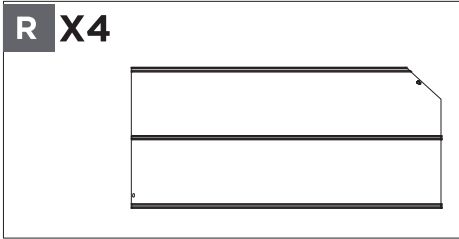


STEP 19


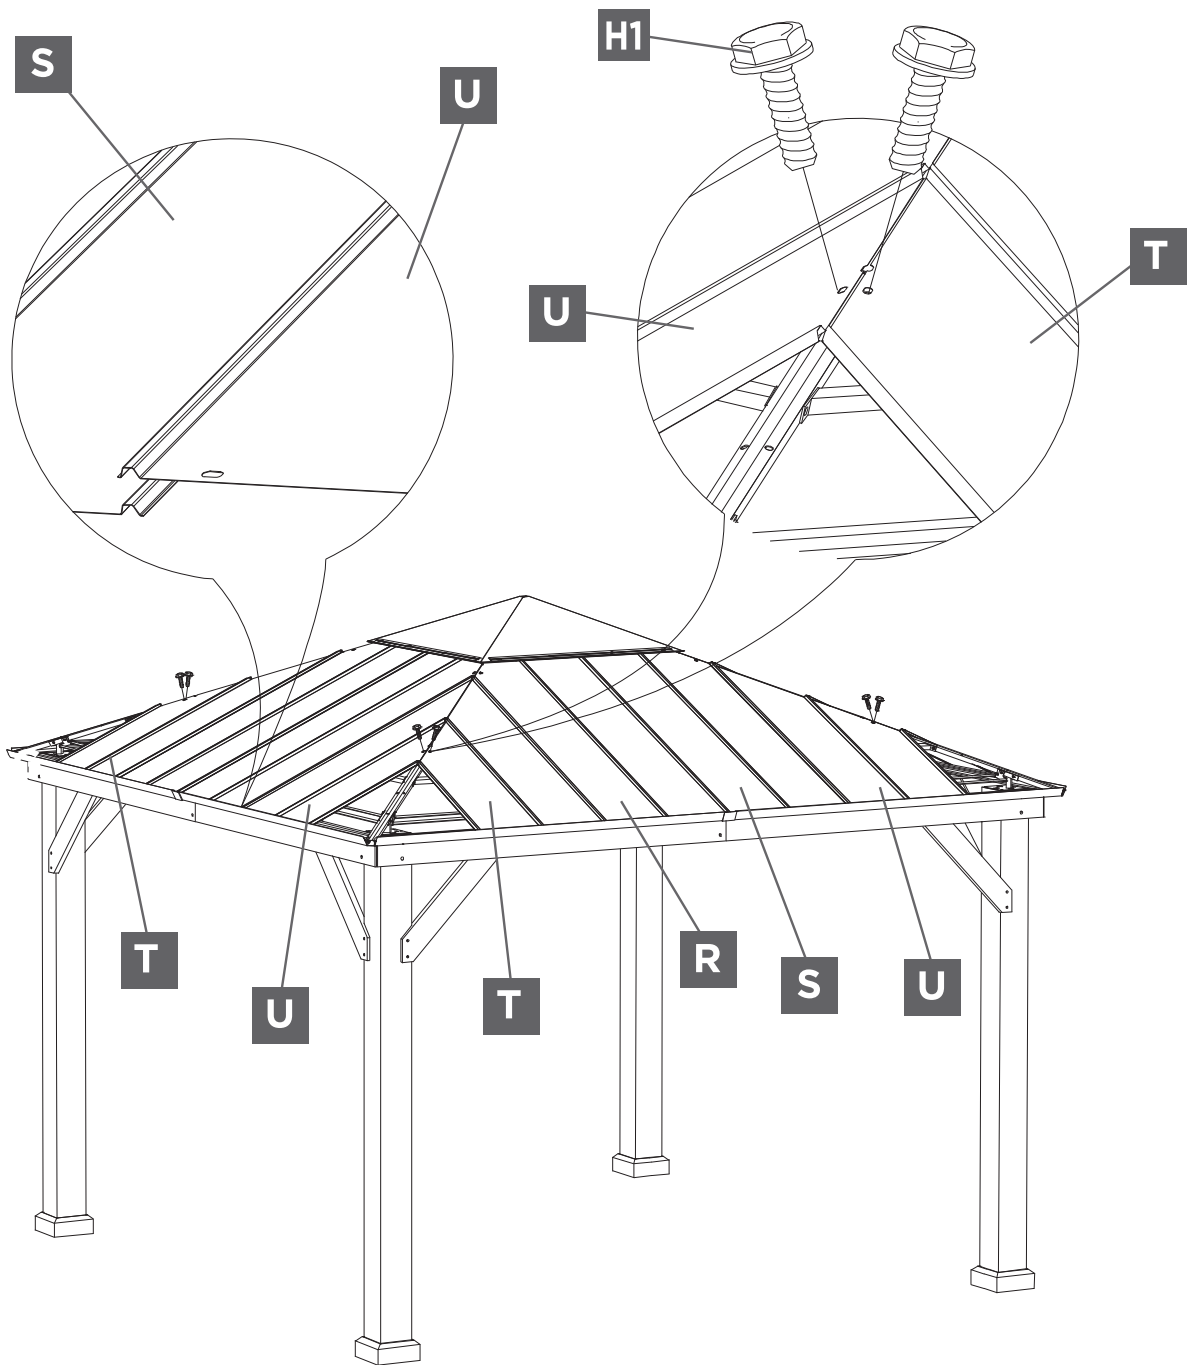
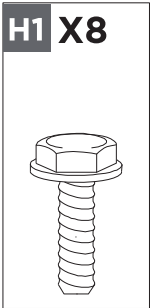
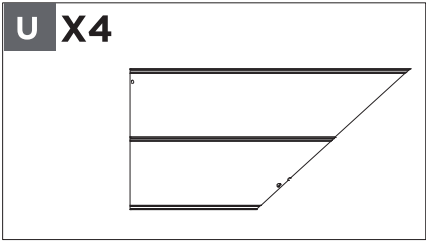
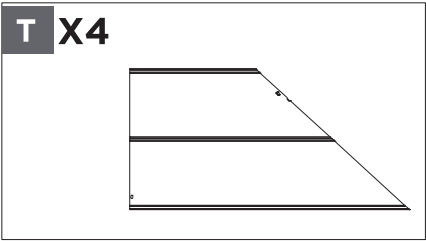


STEP-BY-STEP GUIDE

STEP 20

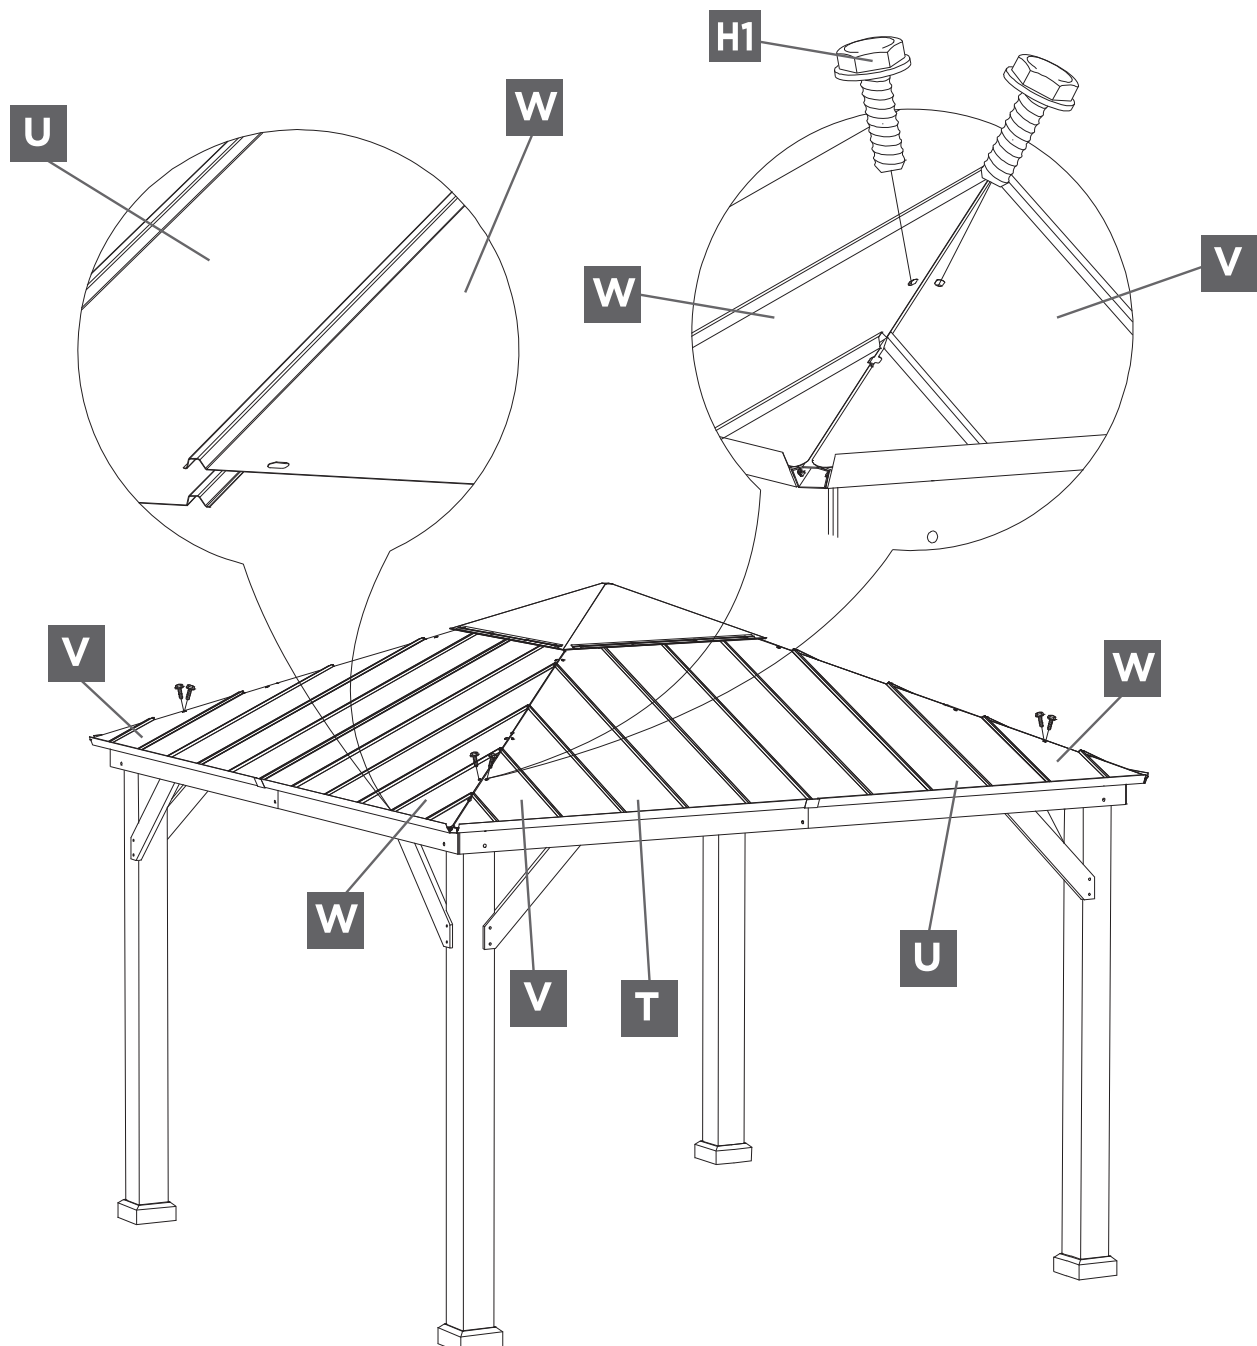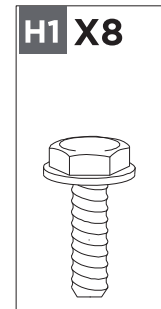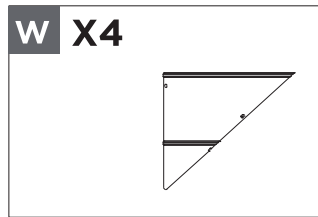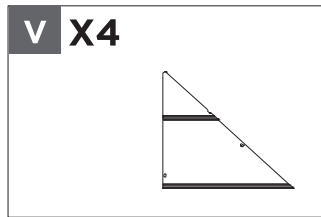


STEP 21

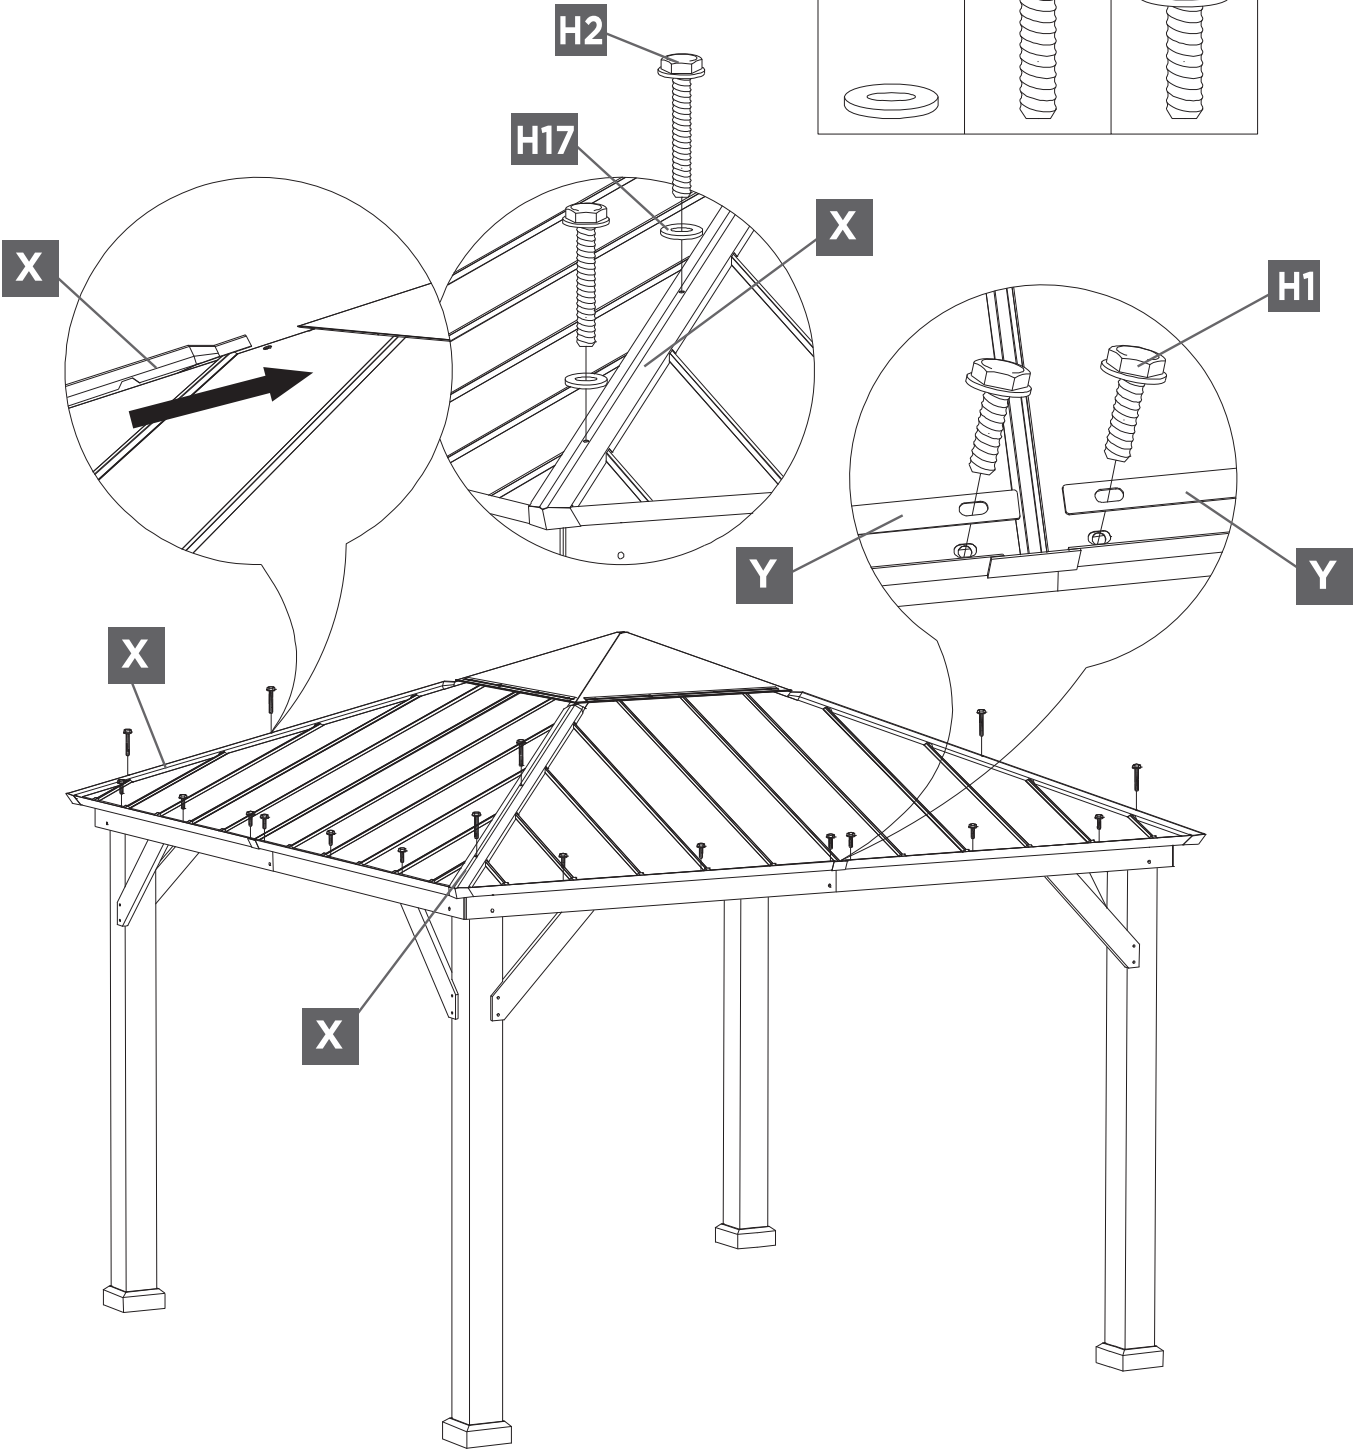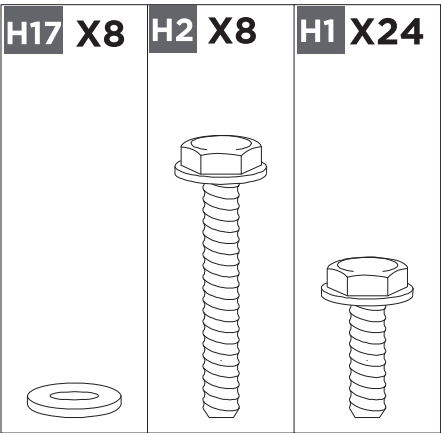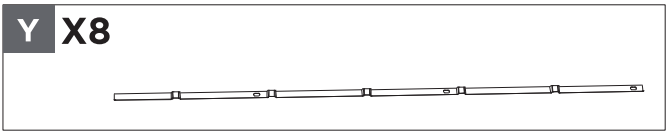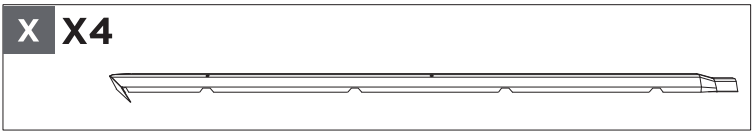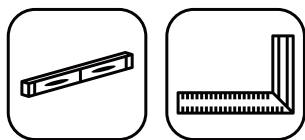


STEP-BY-STEP GUIDE

STEP 22

HS X8

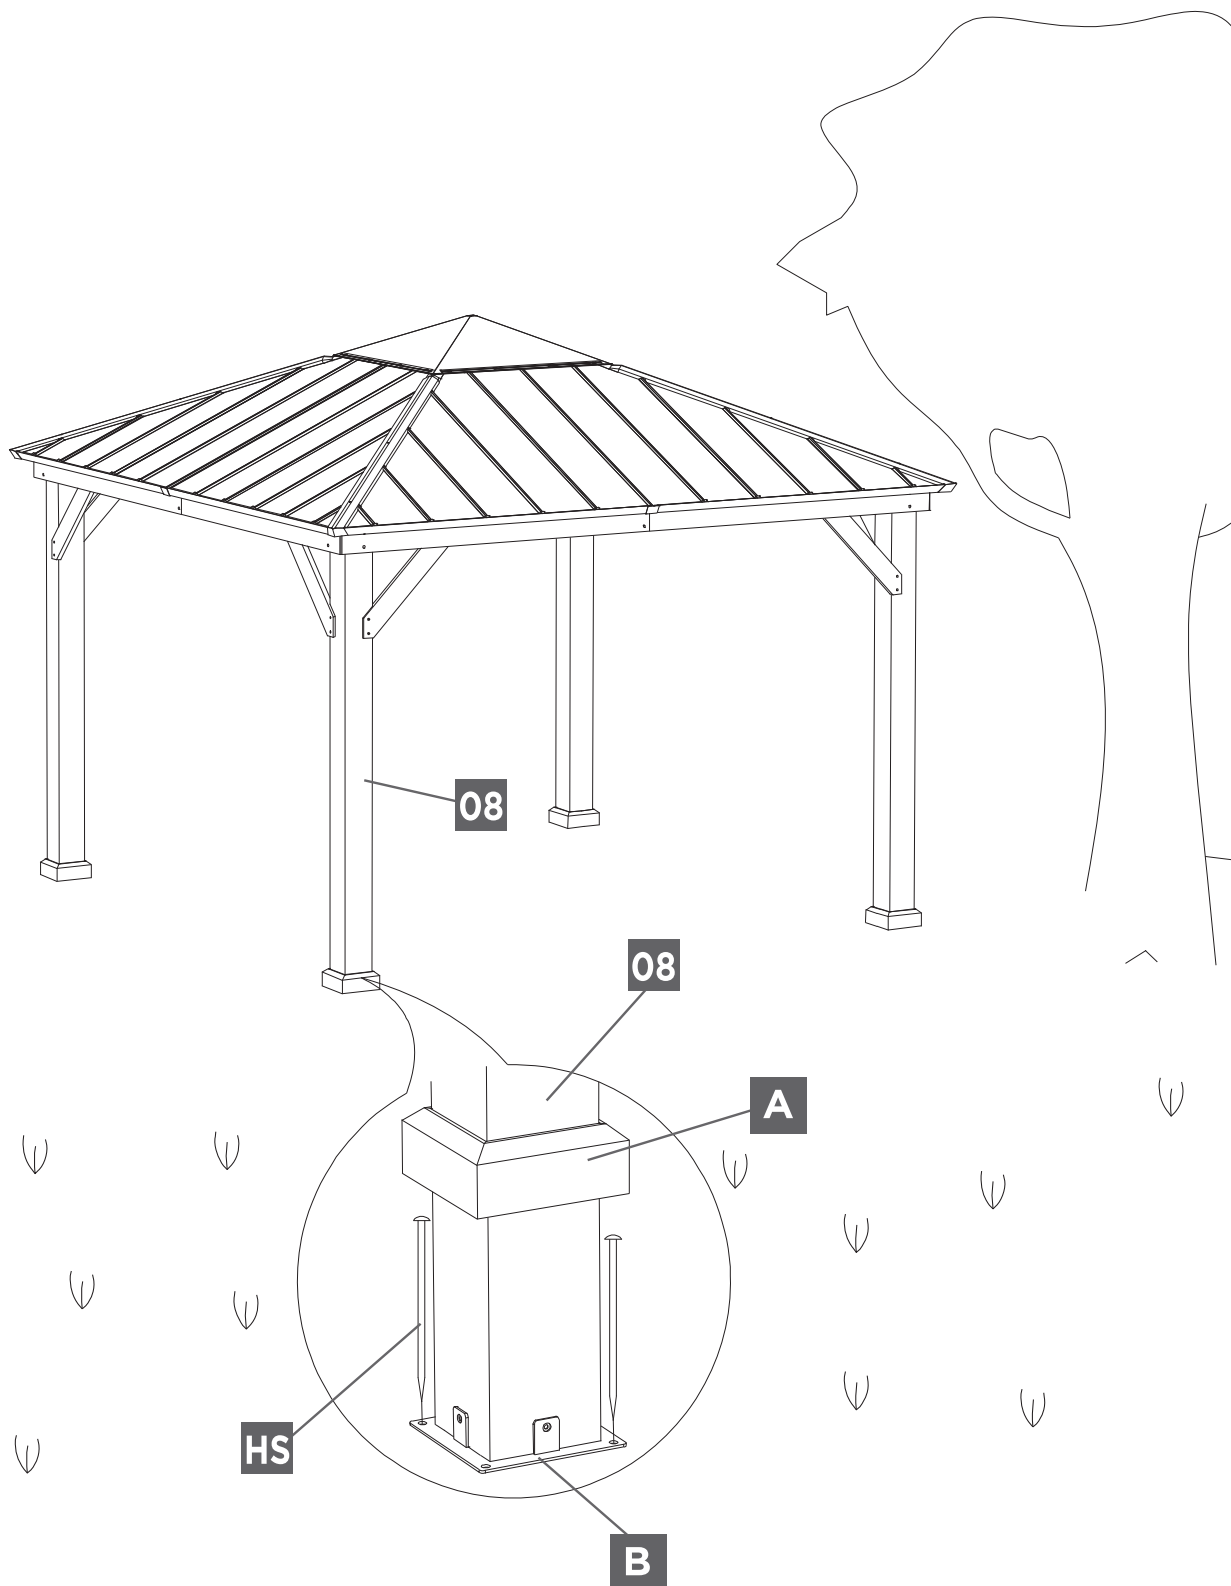

TECHNICAL DATA

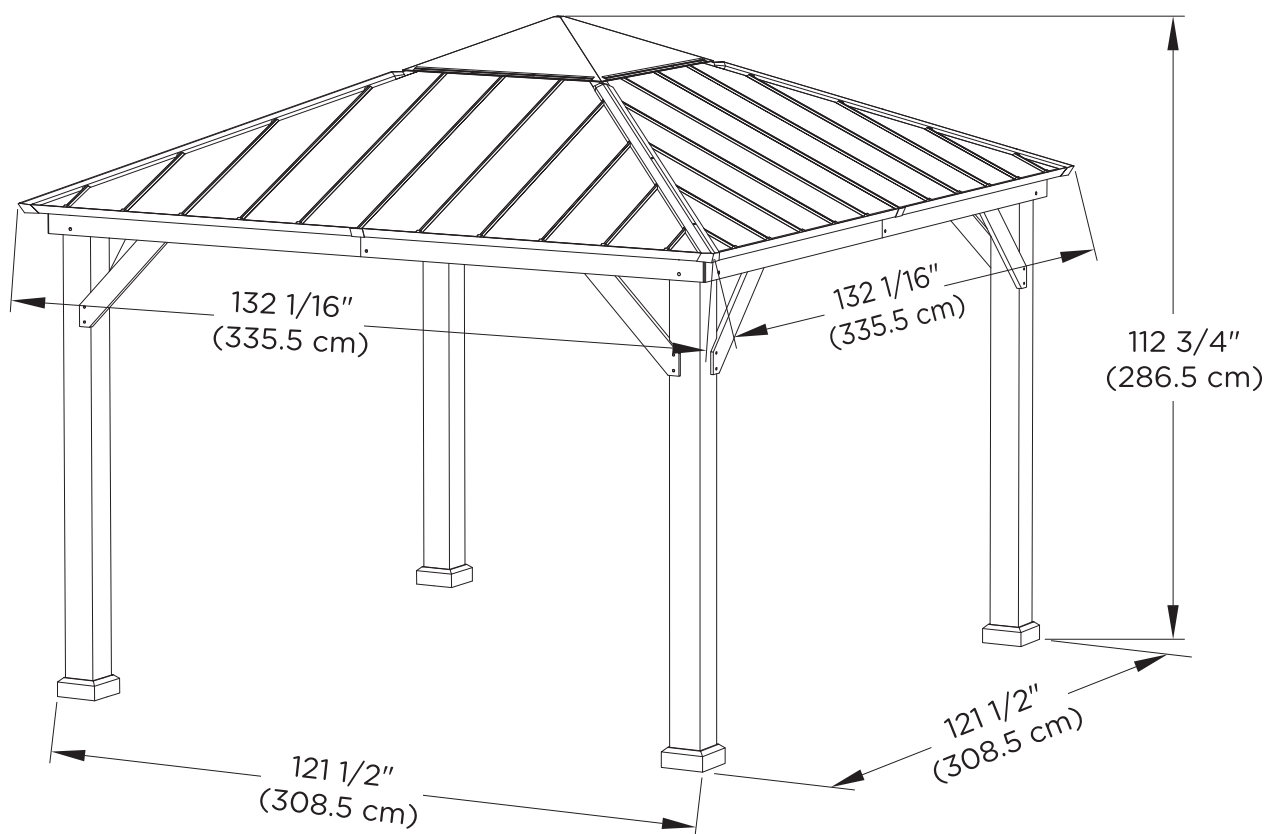

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

$132 \frac{1}{16} \times 132 \frac{1}{16} \times 112 \frac{3}{4}"$

335.5 x 335.5 x 286.5 cm

ASSEMBLED WEIGHT

360 lb 9 oz

163.6 kg

TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**



**CALL US,
WE CAN HELP**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

CARING FOR YOUR ITEM



CAUTION! CHECK ALL SCREWS AND NUTS PERIODICALLY FOR TIGHTNESS, FASTENING THEM AGAIN AS REQUIRED.

Cleaning & Use & Care Instructions

Always keep children under close supervision while they are using or around this product. Never leave children unattended.

This product is intended for outdoor use only.

Do not light any fires below or near the product.

Clean the gazebo with mild soap and water. Rinse thoroughly and wait until the product is dry before reassembling it.

Check all nuts and bolts periodically for tightness. When required, tighten them again.

Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

Remove all excess snow from the roof.

Do not shake, lean or climb on gazebo.

Clean and dry before storing in a dry, sheltered area. Do not use bleach, acid, or other abrasive cleaners on the canopies or frame parts.

Steel components for this gazebo are treated with rust inhibiting paint to prevent and limit rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty. To minimize this condition, it is recommended to use care when assembling and handling the product to prevent scratching of the paint. Should any scratching or damage occur, it is recommended to cover the scratch immediately with rust inhibiting paint (not included). Surface rust can also be easily removed with a very light application of regular cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

In the maintenance of the wooden posts or beams of the gazebo, use wood sandpaper of grit 180 to sand the wood surface to remove any foreign stains or dirt. Wipe off the sanding powder and any dirt with a clean dry cloth before applying a coat of protective varnish/wax.

Carefully read the instructions of the varnish/wax oil before application. It is best to try on a small section of wood, check the result and up if satisfied with the result, then apply the varnish/wax oil onto the remaining wooden parts.

Keep instruction manual for future reference.

Keep the original packaging to store the gazebo.

WARRANTY INFORMATION



3 YEARS LIMITED WARRANTY*

This CANVAS product carries a three (3) year warranty against defects in workmanship and materials on the frame and 1 year warranty for the remaining parts. Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MODEL NO. 085-1873-8

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

